


GENERAC[®]

MOBILE POWER

DIESEL GENERATOR
MMG50ITM • MMG50ITMBAU

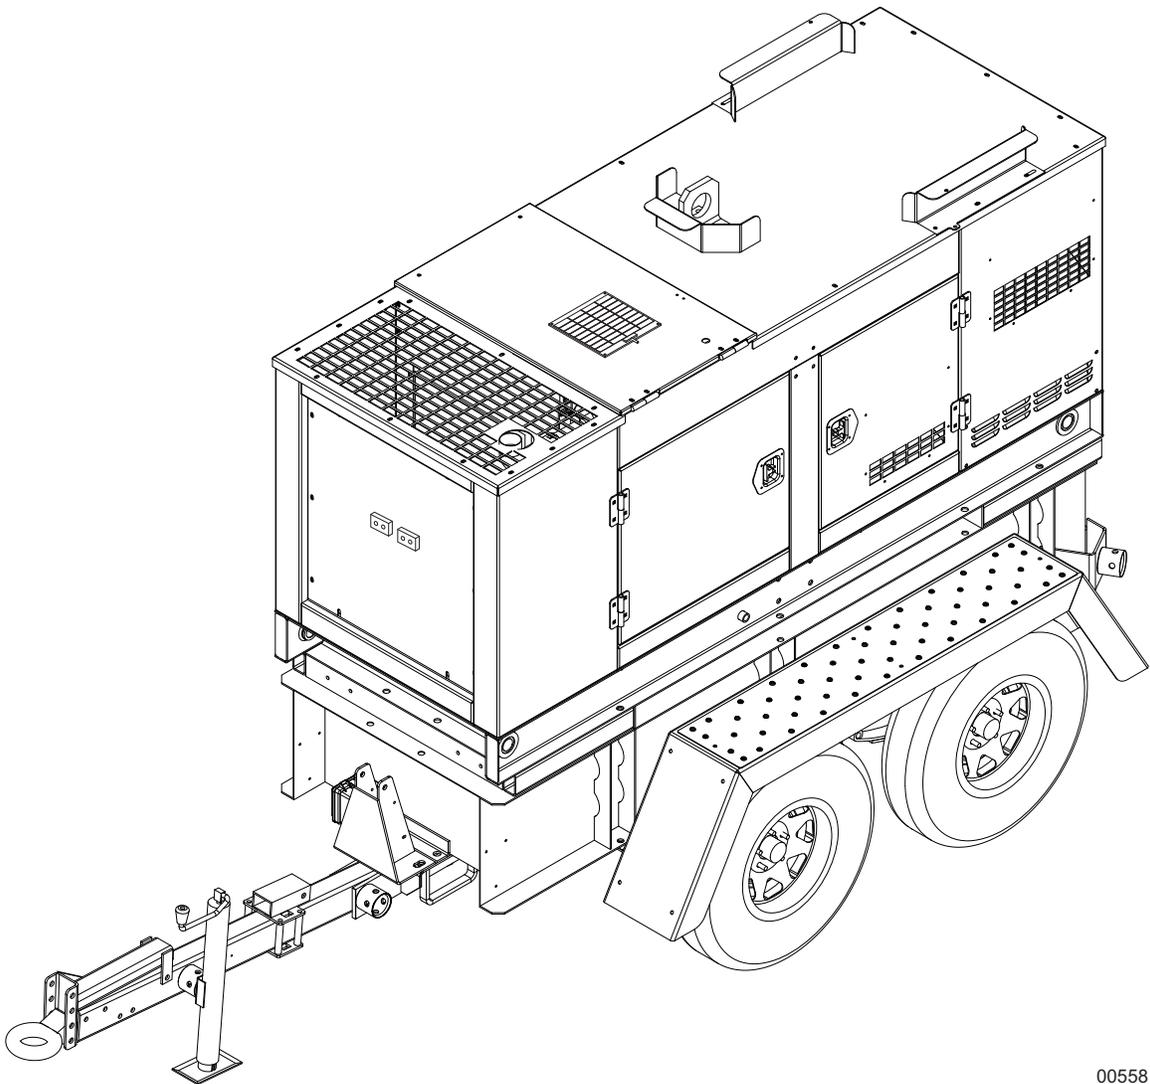

00558

OPERATING MANUAL

INTRODUCTION

This manual provides information and procedures to safely operate and maintain the Generac unit. For your own safety and protection from physical injury, carefully read, understand, and observe the safety instructions described in this manual. Keep a copy of this manual with the unit at all times. Additional copies are available from Generac. *The information contained in this manual was based on machines in production at the time of publication. Generac reserves the right to change any portion of this information without notice.*

Read all of the manuals included with the unit. Each manual details specific information regarding items such as setup, use and service requirements. An engine operator's manual provides detailed operation and maintenance procedures for the engine. Additional copies of the engine operator's manual are available from the engine manufacturer.

DO NOT MODIFY or use this equipment for any application other than which it was designed for.

Generac recommends that a trained and licensed professional perform all electrical wiring and testing functions. Installation should be in compliance with the National Electrical Code (NEC), state and local regulations and Occupational Safety and Health Association (OSHA) guidelines.

GENERAC POWER SYSTEMS, INC.
S45 W29290 Hwy. 59 • Waukesha, WI 53189
U.S.A.
Phone: 1-888-GENERAC (1-888-436-3722)

www.generac.com

For technical or parts QUESTIONS, please contact the Generac Customer Support or Technical Support team at 1-800-926-9768. Please have your serial number available.

To ORDER SERVICE PARTS, please contact the dealer from which you purchased the unit, or call Generac to locate a dealer in your area.

Engine Make: _____

Engine Serial Number: _____

Engine Model Number: _____

Generator Make: _____

Generator Model Number: _____

Generator Serial Number: _____

Unit Model Number: _____

Unit Serial Number: _____

⚠ WARNING

CALIFORNIA PROPOSITION 65 WARNING: Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.

TABLE OF CONTENTS

	Page
INTRODUCTION	2
SAFETY NOTES	5
OPERATING SAFETY	5
ENGINE SAFETY	6
ELECTRICAL SAFETY	6
TOWING SAFETY	7
REPORTING TRAILER SAFETY DEFECTS	7
SAFETY SYMBOL SUMMARY	8
SPECIFICATIONS - MMG50ITM	9
SPECIFICATIONS - MMG50ITMBAU	10
UNIT DIMENSIONS	11
UNIT SERIAL NUMBER LOCATIONS	12
COMPONENT LOCATIONS	13
MAIN CONTROL PANEL FEATURES	14
DIGITAL CONTROLLER	16
DIGITAL CONTROLLER FEATURES AND FUNCTIONS	16
GENERATOR MONITORING	17
ENGINE MONITORING	17
DIGITAL CONTROLLER INFORMATION DISPLAYS, FUNCTIONS, AND RESET	19
DIGITAL CONTROLLER - GENERATOR OPERATIONAL STATUS	19
DIGITAL CONTROLLER - ALARM MANAGEMENT	20
DIGITAL CONTROLLER - LIST OF ALARMS	20
DIGITAL CONTROLLER - HISTORY	21
ADJUSTING THE DISPLAY BACKLIGHTING	22
LOWERING THE TRAILER TONGUE	22
GENERATOR OUTPUT CONNECTION LUGS	22
GENERATOR CAM LOCK CONNECTIONS	23
VOLTAGE SELECTOR SWITCH	24
PRESTART CHECKLIST	26
ENGINE BREAK-IN REQUIREMENTS	26
EMERGENCY STOP SWITCH	26
MANUAL STARTING OF THE UNIT	27
AUTO (REMOTE) STARTING OF THE UNIT	29
VOLTAGE REGULATION	29
DERATING FOR ALTITUDE AND TEMPERATURE	29
WET STACKING	29
CONTROL PANEL RECEPTACLES	30
MAIN CIRCUIT BREAKER	30
REMOTE START TERMINAL BLOCK	31
TRANSFER SWITCH	31
AUTO EXERCISE TIMER	32
FINE VOLTAGE ADJUSTMENT	32
SHUTTING DOWN THE UNIT	33
TOWING THE TRAILER	33
LIFTING THE GENERATOR	34
DAILY WALK AROUND INSPECTION	34
ENGINE AND GENERATOR MAINTENANCE	34
BASIC MAINTENANCE SCHEDULE - ISUZU ENGINE	35
RESETTING THE "TIME TO SERVICE" REMINDER	35
CHECKING GENERATOR DRIVE PLATE TORQUE	36
JACK MAINTENANCE	36
TRAILER WHEEL BEARINGS	36
TROUBLESHOOTING AUTOMATIC SHUT DOWN CONDITIONS	37
AC WIRING DIAGRAM	39
DC WIRING DIAGRAM	40
TRAILER LIGHTS WIRING DIAGRAM	41
WIRING HARNESS - ELECTRIC BRAKE	42
SERVICE LOG	43

This Page Intentionally Left Blank

SAFETY NOTES



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

This manual contains DANGERS, WARNINGS, CAUTIONS, NOTICES and NOTES which must be followed to prevent the possibility of improper service, damage to the equipment, personal injury or death. The following formatting options will apply when calling the reader's attention to the DANGERS, WARNINGS, CAUTIONS, NOTICES and NOTES.

▲ DANGER

INDICATES A HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, WILL RESULT IN DEATH OR SERIOUS INJURY.

▲ WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

▲ CAUTION

Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE

Indicates a hazardous situation which, if not avoided, may result in property or equipment damage.

Note: Notes contain additional information important to a procedure and will be found within the regular text body of this manual.

OPERATING SAFETY



Before using the generator, be sure you read and understand all of the instructions. This equipment was designed for specific applications; **DO NOT** modify or use this equipment for any application other than which it was designed for. Equipment operated improperly or by untrained personnel can be dangerous. Read the operating instructions and familiarize yourself with the location and proper use of all instruments and controls. Inexperienced operators should receive instruction from someone familiar with the equipment before being allowed to operate or set up the generator. The following points should be practiced at all times:

- The area immediately surrounding the generator should be dry, clean, and free of debris.
- **NEVER** start a unit in need of repair.
- Make certain the generator is securely fastened to a good earthen ground before use.
- **NEVER** operate the unit on a combustible surface.
- **NEVER** operate the generator if any of the following conditions exist during operation:
 1. Noticeable change in engine speed.
 2. Loss of electrical output.
 3. Equipment connected to the generator overheats.
 4. Sparking occurs.
 5. Engine misfires or there is excessive engine/generator vibration.
 6. Protective covers are loose or missing.
 7. If the ambient air temperature is above 120°F (49°C).
- Make sure slings, chains, hooks, ramps, jacks, and other types of lifting devices are attached securely and have enough weight-bearing capacity to lift or hold the equipment safely. Always remain aware of the position of other people around you when lifting the equipment.
- **NEVER** operate a unit while tired, distracted, or under the influence of drugs or alcohol.

ENGINE SAFETY



Internal combustion engines present special hazards during operation and fueling. Failure to follow the safety guidelines described below could result in severe injury or death. Read and follow all safety warnings described in the engine operator's manual. A copy of this manual was supplied with the unit when it was shipped from the factory.

- **DO NOT** run engine indoors or in an area with poor ventilation. Diesel engine exhaust contains carbon monoxide, a deadly, odorless and colorless gas which, if inhaled, can cause nausea, fainting or death. Only use this unit outside and away from windows, doors, and ventilation equipment.
- **DO NOT** fill fuel tank near an open flame, while smoking, or while engine is running. **DO NOT** fill tank in an enclosed area with poor ventilation.
- **DO NOT** operate with the fuel tank cap loose or missing.
- **DO NOT** touch or lean against hot exhaust pipes or engine cylinders.
- **DO NOT** clean air filter with gasoline or other types of low flash point solvents.
- **DO NOT** remove engine coolant cap while engine is hot.
- **DO NOT** operate the unit without a functional exhaust system. Prolonged exposure to sound levels in excess of 85 dB(A) can cause permanent hearing loss. Wear hearing protection when working around a running engine.
- Keep hands, feet and loose clothing away from moving parts on the generator and engine.
- Keep area around exhaust pipes and air ducts free of debris to reduce the chance of an accidental fire.
- Batteries contain sulfuric acid which can cause severe injury or death. Sulfuric acid can cause eye damage, burn flesh or eat holes in clothing. Protective eye wear and clothing are necessary when working on or around the battery. Always disconnect the negative (-) battery cable from the corresponding terminal before performing any service on the engine or other components.

ELECTRICAL SAFETY



The unit is powered by a generator driven by a diesel engine. While the engine is running, potentially lethal voltages are present at the 120V Ground Fault Circuit Interrupt (GFCI) receptacles located on the control panel, and at the connection lugs and cam lock receptacles. Failure to follow the safety guidelines described below could result in severe injury or death.

- Only a qualified and licensed electrician should make connections to the generator.
- **NEVER** wash the unit with high pressure hoses or power washers.
- **NEVER** start the unit under load. The circuit breakers must be in the OFF (O) position when starting the unit in Manual mode. The circuit breakers can be in the ON (I) position only when started in the Auto mode. A transfer switch must be used in the Auto mode to deflect the load upon start up.
- **ALWAYS** disconnect the negative (-) battery cable from the corresponding terminal before performing any service on the engine, generator or any other components. Remove the negative (-) battery cable from the corresponding terminal if the unit is to be stored or transported.
- **ALWAYS** use extreme caution when servicing this unit in damp conditions. Do not service the unit if your skin or clothing is wet. Do not allow water to collect around the base of the unit.
- **ALWAYS** connect the unit to a good earthen ground before use. Follow the National Electrical Code (NEC), state or local regulations.

TOWING SAFETY



Towing a trailer requires care. Both the trailer and vehicle must be in good condition and securely fastened to each other to reduce the possibility of an accident. Also, some states require that large trailers be registered and licensed. Contact your local Department of Transportation office to check on license requirements for your particular unit.

- Check that the hitch and coupling on the towing vehicle are rated equal to, or greater than, the trailer's Gross Vehicle Weight Rating (GVWR).
- Check tires on trailer for tread wear, inflation, and condition.
- **NEVER** tow trailer using defective parts! Inspect the hitch and coupling for wear or damage.
- Make sure the trailer hitch and the coupling are compatible. Make sure the coupling is securely fastened to the vehicle.
- Connect safety chains in a crossing pattern under the tongue and **ATTACH THE BREAKAWAY CABLE TO THE REAR BUMPER OF THE TOWING VEHICLE**. Do not attach the cable to the trailer hitch.
- Make sure directional and brake lights on the trailer are connected and working properly.
- Check that lug nuts holding wheels are tight and that none are missing.
- Maximum recommended speed for highway towing is 45 mph (72 km/h). Recommended off-road towing speed is not to exceed 10 mph (16 km/h) or less, depending on terrain.

Before towing the trailer, check that the weight of the trailer is equal across all tires. On trailers with adjustable height hitches, adjust the angle of the trailer tongue to keep the trailer as level as possible. On units equipped with a tandem axle trailer, a large angle between the trailer and tow vehicle will cause more weight to be carried by one axle, which could cause premature wear on the tires and axles and cause potentially unsafe operating conditions.

The trailer is equipped with electric surge brakes. Check the operation of the brakes by braking the vehicle at a slow speed before entering traffic. Both the trailer and the vehicle should brake smoothly. If the trailer seems to be pushing, check the level in the surge brake fluid reservoir.

When towing, maintain extra space between vehicles and avoid soft shoulders, curbs and sudden lane changes. If you have not pulled a trailer before, practice turning, stopping, and backing up in an area away from heavy traffic.

A film of grease on the coupler will extend coupler life and eliminate squeaking. Wipe the coupler clean and apply fresh grease each time the trailer is towed.

REPORTING TRAILER SAFETY DEFECTS

If you believe your trailer has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Generac.

If NHTSA receives similar complaints, it may open an investigation; and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in an individual problem between you, your dealer, or Generac.

 
To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-888-327-4236 (TTY:1-800-424-9153), go to <http://www.safercar.gov>; or write to:

Administrator
NHTSA
1200 New Jersey Avenue S.E.
Washington, DC 20590

You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

SAFETY SYMBOL SUMMARY

This equipment has been supplied with numerous safety and operating decals. These decals provide important operating instructions and warn of dangers and hazards. Replace any missing or hard-to-read decals and use care when washing or cleaning the unit. Decal placement and part numbers can be found in the parts manual. Below is a summary of the intended meanings for the symbols used on the decals.

	Safety alert symbol; used to alert you to potential personal injury hazards.		Asphyxiation hazard; operate in well ventilated area.
	Hot surface(s) nearby.		Dangerous voltage may be present.
	Belt/entanglement hazard; keep body parts clear of this area.		Anchor/tie down point.
	Fan hazard; keep body parts clear of this area.		Isolate generator to prevent electrocution hazard.
	Never change switch position while engine is running.		Use clean diesel fuel only.
	Stop engine before making connections.		Remove negative battery cable before performing any service on unit.
	Stop engine before fueling.		Read and understand the supplied operator's manual before operating unit.
	Hearing protection required while operating unit with doors open.		Unit electrical ground.
	Lift here only.		Fire/explosion hazard; keep open flames away from unit.
	Engine running.		Burn/scald hazard; pressurized steam.

00483

SPECIFICATIONS - MMG50ITM

GENERAC MODEL

MMG50ITM

Engine

Make/Brand.....	Isuzu
Model	4LE2XAGV01
EPA Tier	Final 4
Horsepower - prime hp (kW)	57 (42.8)
Horsepower - standby hp (kW)	63.7 (47.5)
Operating Speed rpm	1800
Displacement in³ (L)	134 (2.2)
Cylinders - qty	4
Fuel Consumption - 100% prime gph (Lph)	3.3 (12.5)
Battery Type.....	Group 35/55
Battery Voltage (Quantity per Unit)	12V (1)
Battery Rating	720 CCA

Generator

Make/Brand.....	Marathon Electric
Model	286PSL1701
Type, Insulation.....	Brushless, H

Generator Set (Engine/Generator)

3Ø - Standby kW (kVA)	42 (53)
Amps - 3Ø Standby 480V (208V) A	63 (146)
3Ø - Prime kW (kVA)	38 (47)
Amps - 3Ø Prime 480V (208V) A	57 (131)
1Ø - Standby kW (kVA)	40 (40)
Amps - 1Ø Standby - 240V A	166
1Ø - Prime kW (kVA)	36 (36)
Amps - 1Ø Prime - 240V A	150
Frequency Hz	60
Power Factor.....	1 (1Ø), 0.8 (3Ø)
Sound dB(A) 23 ft @ prime	68

Weights

Dry Weight, Skid Mounted lbs (kg)	3251 (1475)
Operating Weight, Skid Mounted lbs (kg)	4000 (1814)
Dry Weight, Trailer Mounted lbs (kg)	4001 (1815)
Operating Weight, Trailer Mounted lbs (kg)	4750 (2155)

Capacities

Fuel Tank Volume gal (L)	104 (394)
Usable Fuel Volume gal (L)	94 (356)
Coolant (incl. engine) qt (L)	18 (17)
Oil (incl. filter) qt (L)	11.0 (10.4)
Maximum Run Time hrs.	28.5

AC Distribution

Circuit Breaker Size	225
Voltage Selection	3 Position Switch (lockable)
Voltage Regulation	+/- 1%
Voltages Available 1Ø.....	120, 139, 208, 220, 240, 277
Voltages Available 3Ø.....	208, 220, 440, 480

Trailer

Number of Axles	2
Capacity - Axle Rating lbs (kg)	3500 (1588)
Tire Size in	15
Brakes.....	Surge
Hitch - Standard	2" Pintle
Maximum Tire Pressure psi	50

Specifications are subject to change without notice.

SPECIFICATIONS - MMG50ITMBAU

GENERAC MODEL

MMG50ITMBAU

Engine

Make/Brand.....	Isuzu
Model	4LE2XAGV01
EPA Tier	Final 4
Horsepower - prime hp (kW)	57 (42.8)
Horsepower - standby hp (kW)	63.7 (47.5)
Operating Speed rpm	1800
Displacement in³ (L)	134 (2.2)
Cylinders - qty	4
Fuel Consumption - 100% prime gph (Lph)	3.3 (12.5)
Battery Type.....	Group 35/55
Battery Voltage (Quantity per Unit)	12V (1)
Battery Rating	720 CCA

Generator

Make/Brand.....	Marathon Electric
Model	286PSL1701
Type, Insulation.....	Brushless, H

Generator Set (Engine/Generator)

3Ø - Standby kW (kVA)	42 (53)
Amps - 3Ø Standby 480V (208V) A	63 (146)
3Ø - Prime kW (kVA)	38 (47)
Amps - 3Ø Prime 480V (208V) A	57 (131)
1Ø - Standby kW (kVA)	40 (40)
Amps - 1Ø Standby - 240V A	166
1Ø - Prime kW (kVA)	36 (36)
Amps - 1Ø Prime - 240V A	150
Frequency Hz	60
Power Factor.....	1 (1Ø), 0.8 (3Ø)
Sound dB(A) 23 ft @ prime	68

Weights

Dry Weight, Skid Mounted lbs (kg)	3643 (1652)
Operating Weight, Skid Mounted lbs (kg)	5077 (2303)
Dry Weight, Trailer Mounted lbs (kg)	4393 (1993)
Operating Weight, Trailer Mounted lbs (kg)	5827 (2643)

Capacities

Fuel Tank Volume gal (L)	202 (764)
Usable Fuel Volume gal (L)	190 (719)
Coolant (incl. engine) qt (L)	18 (17)
Oil (incl. filter) qt (L)	11.0 (10.4)
Maximum Run Time hrs.	57

AC Distribution

Circuit Breaker Size	225
Voltage Selection	3 Position Switch (lockable)
Voltage Regulation	+/- 1%
Voltages Available 1Ø.....	120, 139, 208, 220, 240, 277
Voltages Available 3Ø.....	208, 220, 440, 480

Trailer

Number of Axles	2
Capacity - Axle Rating lbs (kg)	3500 (1588)
Tire Size in	15
Brakes.....	Surge
Hitch - Standard	2" Pintle
Maximum Tire Pressure psi	50

Specifications are subject to change without notice.


UNIT DIMENSIONS

GENERAC MODEL

MMG50ITM (shown below)

Dimensions

Skid Mounted (L x W x H)	95 x 43.5 x 63 in 2.41 x 1.10 x 1.56 m
Trailer Mounted (L x W x H)	154 x 59 x 81.5 in 3.91 x 1.50 x 2.07 m

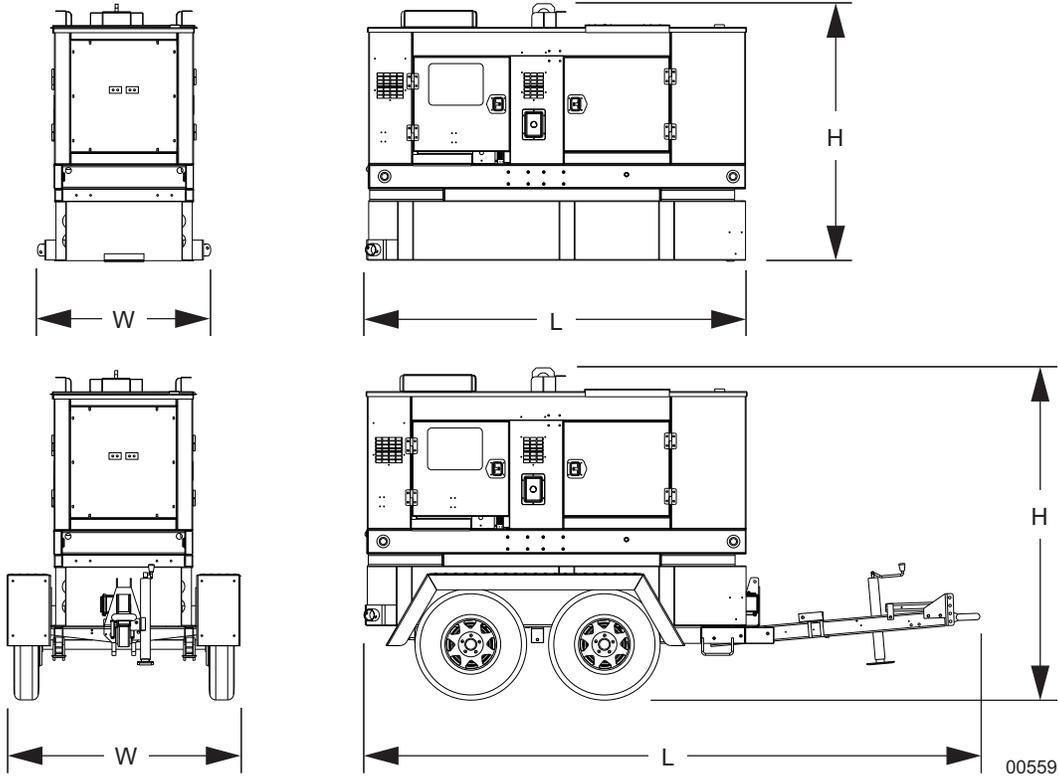

GENERAC MODEL

MMG50ITMBAU


Dimensions

Skid Mounted (L x W x H)	95 x 51.7 x 63 in 2.43 x 1.31 x 1.56 m
Trailer Mounted (L x W x H)	154 x 67 x 89 in 3.91 x 1.70 x 2.27 m

Specifications are subject to change without notice.



UNIT SERIAL NUMBER LOCATIONS

Refer to the illustration to locate the unit ID tag and Vehicle Identification Number (VIN) tag on the unit. Important information, such as the unit serial number, model number, VIN and tire loading information are found on these tags. Record the information from these tags so it is available if the tags are lost or damaged. When ordering parts or requesting assistance, you may be asked to provide this information.

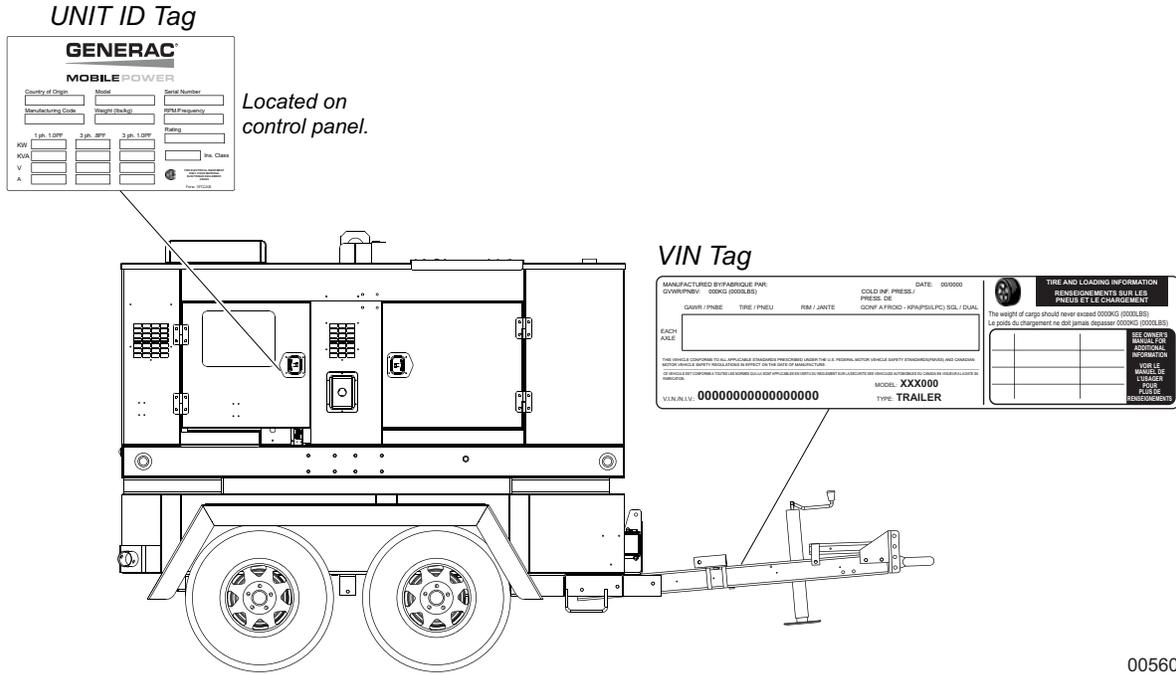


00560

COMPONENT LOCATIONS

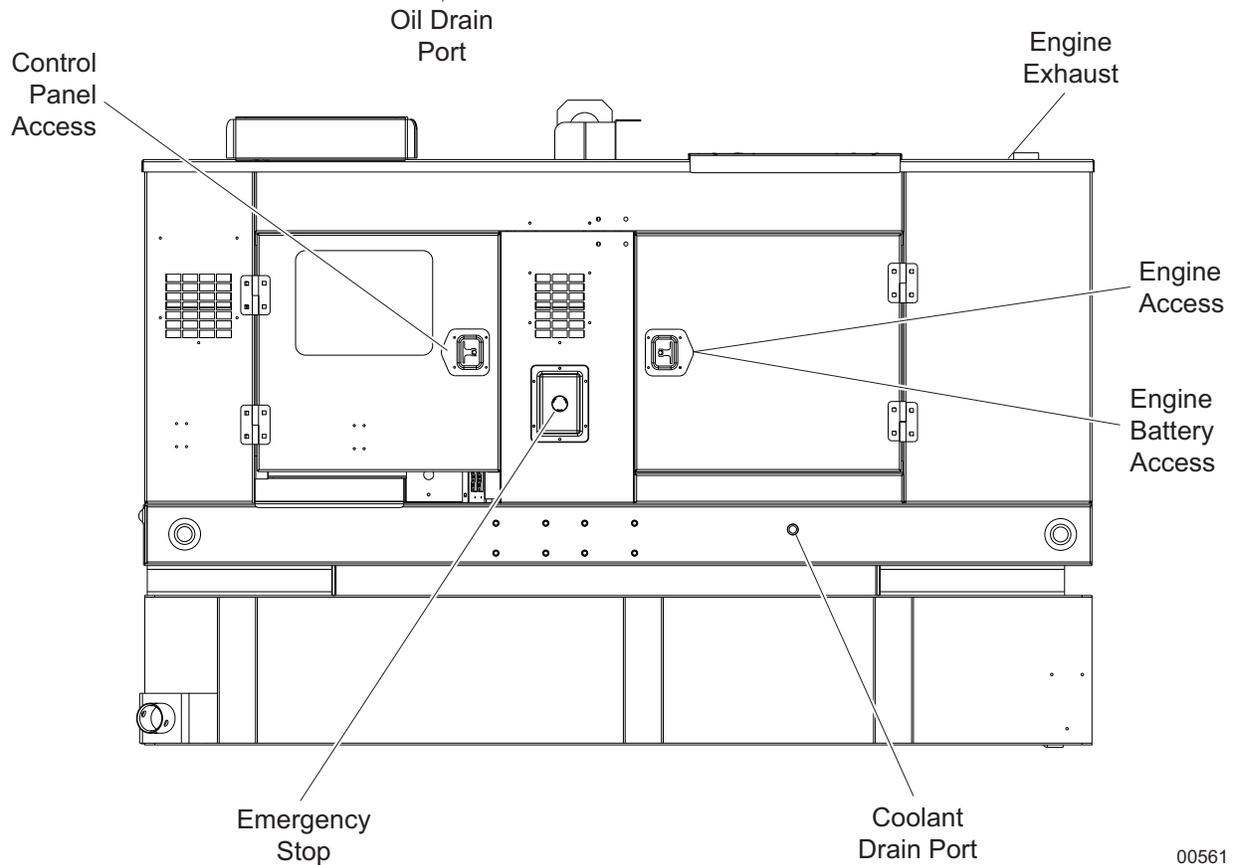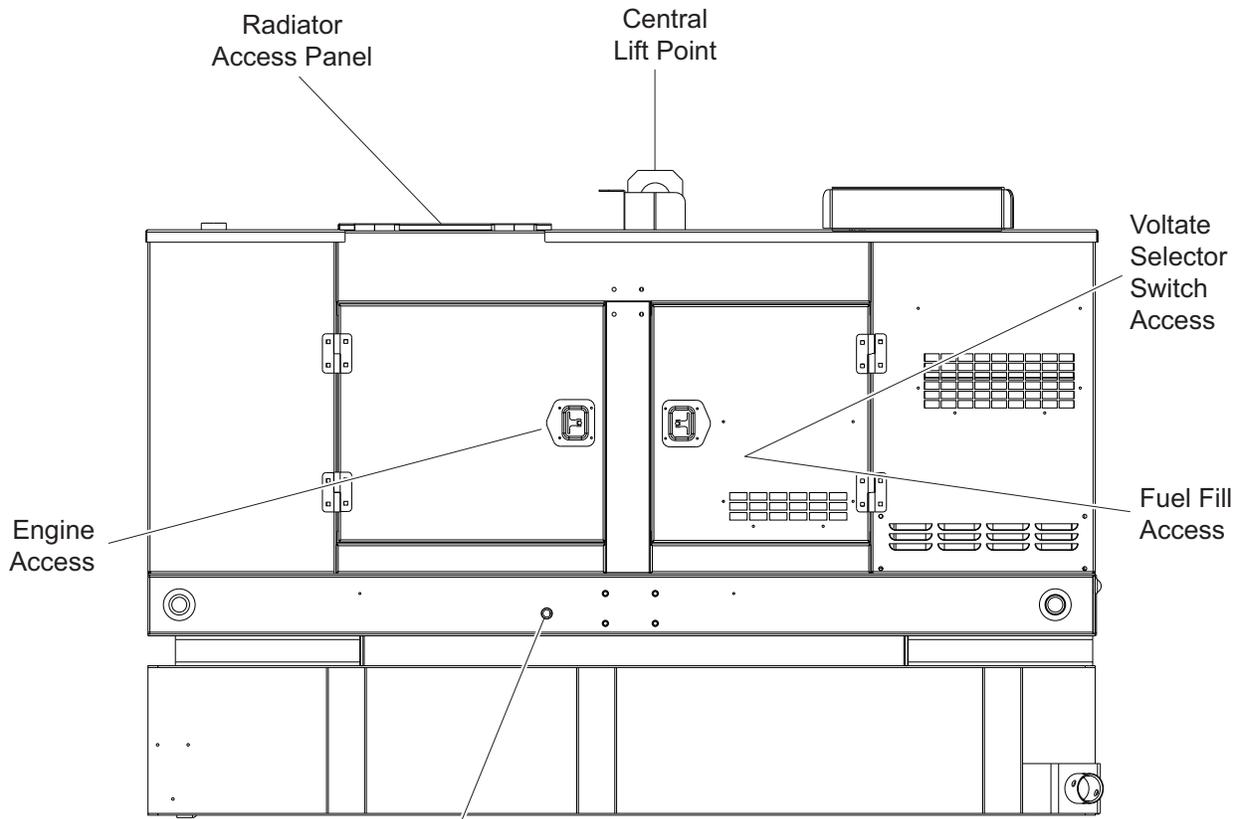

00561

MAIN CONTROL PANEL FEATURES

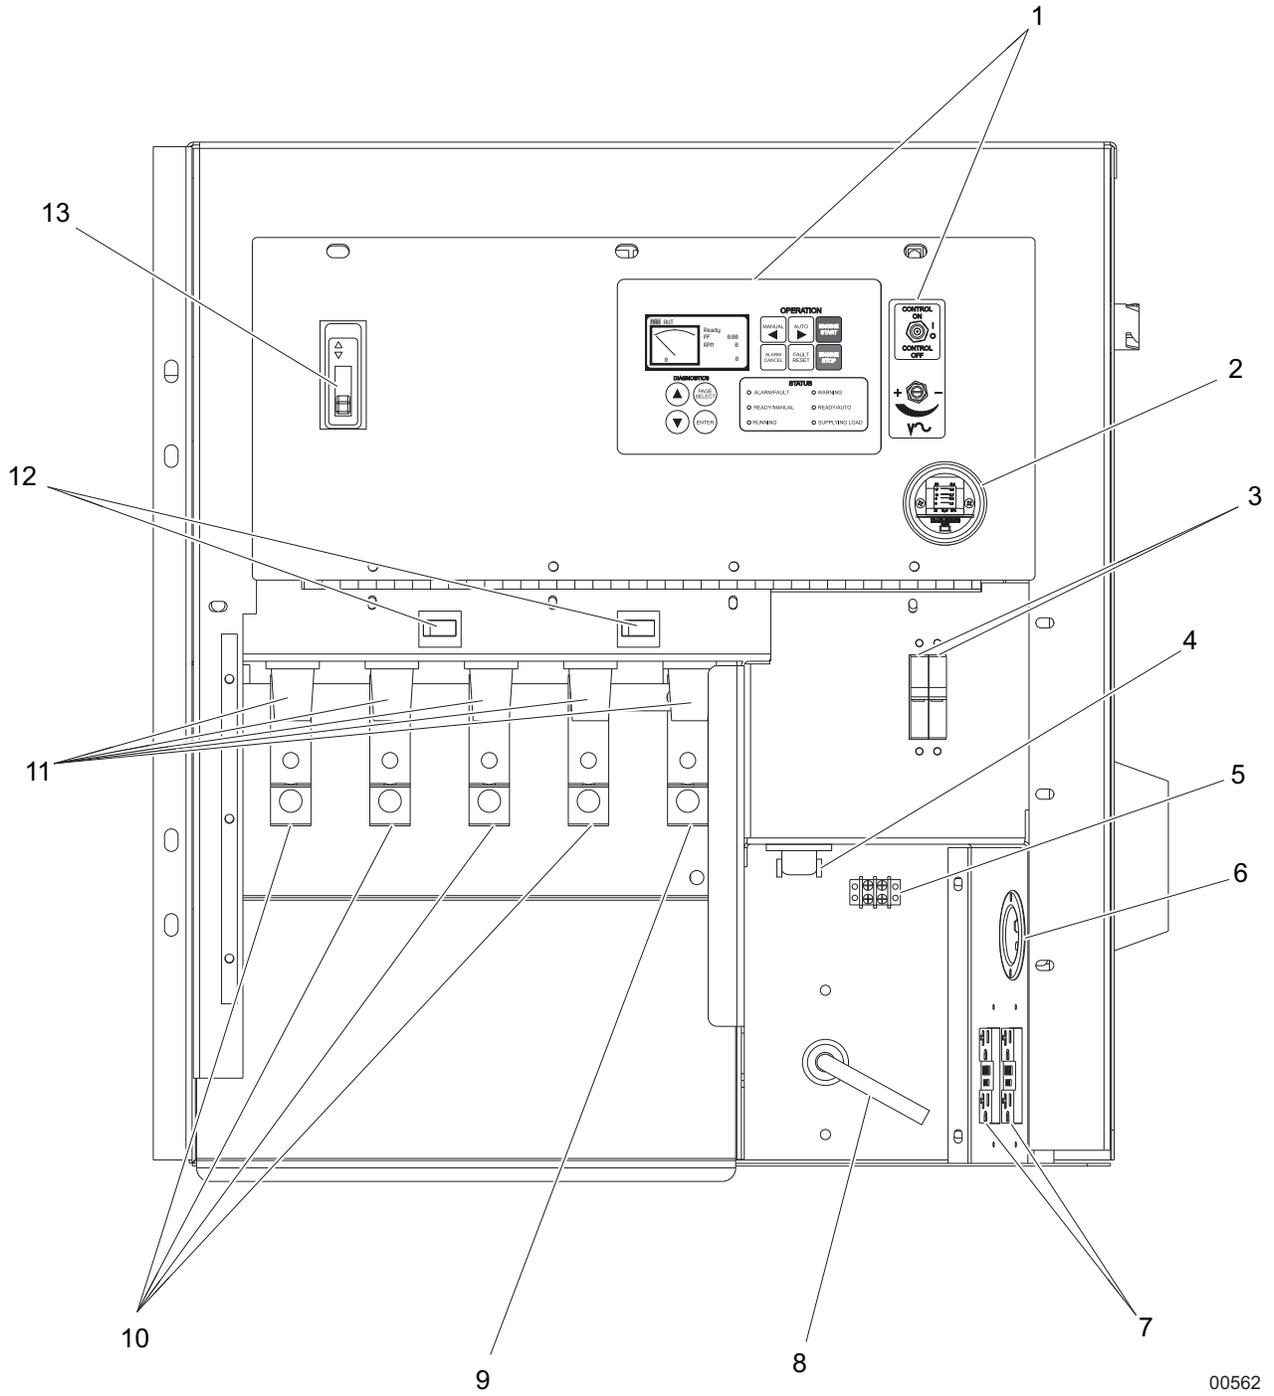


00562

1. **DIGITAL CONTROLLER:** The digital controller controls and monitors engine and generator operation. Refer to [page 16](#) for more information.
2. **AIR FILTER METER:** This gauge shows the condition of the air filter when the engine is running.
3. **20A CIRCUIT BREAKERS:** Two 20A circuit breakers are supplied for the 120V GFCI receptacles.
4. **SUPERVISORY CONTROL AND DATA ACQUISITION (SCADA) CONNECTION:** This connection is for remote monitoring.
5. **REMOTE START TERMINAL BLOCK:** This terminal block allows the generator to be started from a remote location with a dry-contact closure switch when the generator is used for standby or remote power.
6. **ENGINE ACCESSORY CONNECTION:** This connection powers the optional battery charger or other engine accessories.
7. **120V GFCI RECEPTACLES:** These two receptacles are used for connecting additional loads or equipment to the generator.
8. **BATTERY DISCONNECT SWITCH:** This switch disconnects power to the battery.
9. **GENERATOR GROUND CONNECTION LUG:** This lug is for connecting a good earthen ground per the National Electrical Code (NEC), state and local regulations before starting the generator.
10. **GENERATOR OUTPUT CONNECTION LUGS:** These lugs allow appropriate loads to be wired directly to the generator.
11. **CAM LOCK CONNECTORS:** Series 16 taper nose 400A/600V cam locks are connected here. Refer to [page 23](#) for more information.
12. **DOOR SAFETY SWITCHES:** The connection lug door is equipped with safety interlock switches that will trip the main circuit breaker and disable the voltage regulator if the door is opened while the unit is operating.
13. **MAIN CIRCUIT BREAKER:** This breaker will disconnect power to the connection lugs and cam lock receptacles (items 8-9). It **WILL NOT** disconnect power to the convenience receptacles when the engine is running.

DIGITAL CONTROLLER

The Digital Controller is an enhanced digital generator controller used to start, stop and monitor the operation of the generator and the engine. The controller constantly monitors vital generator and engine functions for a number of pre-programmed alarm and fault conditions. When a fault condition occurs, the engine will shut down automatically and the Liquid Crystal Display (LCD) window will display the fault that caused the shut down; to resume operation the fault condition must be resolved. The controller has the ability to provide the display readout in English and Spanish; other languages are available. A print out of the screen is also available. This controller also records a history of the unit's performance which may be viewed at any time and will not be removed or lost when the controller is powered down.

The Digital Controller panel consists of five sections, including: the Control Power toggle switch and Fine Voltage Adjustment screw; the Operation keypad; the LCD window; the Diagnostics keypad; and the Status Light Emitting Diodes (LED's).

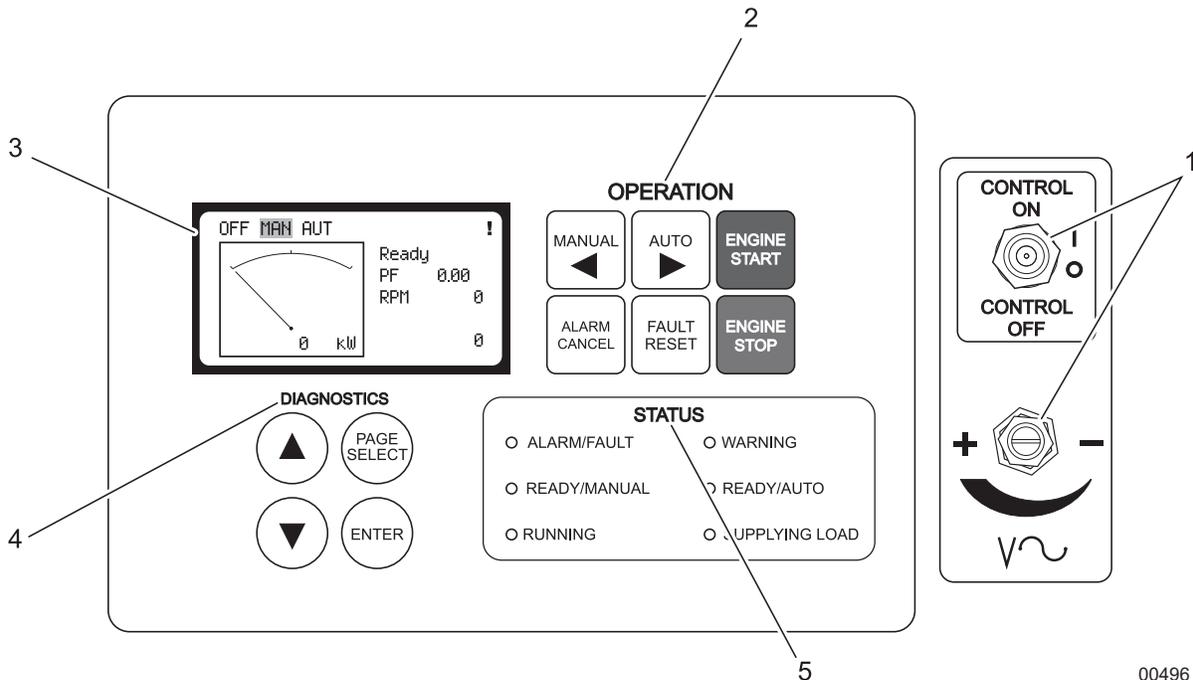

00496

DIGITAL CONTROLLER FEATURES AND FUNCTIONS

1. The Control Power Switch and Fine Voltage Adjustment Screw

- **Control Power Switch:** This toggle switch powers up the control panel and the controller.
- **Fine Voltage Adjustment Screw:** This screw may be adjusted to set the generator output voltage after the voltage selector switch has been changed from one phase to another. This adjustment **MUST** be accomplished within 45 seconds of startup, during the "V Detect," so that the unit does not experience a shutdown alarm for over or under voltage. Refer to ["Prestart Checklist" on page 26](#) for more information.

2. The Operation Keypad

- **Engine Start:** Press the green Engine Start button to start the unit. The unit must be in the "MAN" mode in the upper left corner of the LCD window and the Ready/Manual LED lit in the Status portion of the controller.
- **Engine Stop:** Press the red Engine Stop button to shut down the unit and start the stop value timer.
- **Manual ◀:** Press this button to change from the Automatic (Remote) mode to Manual mode.
- **Auto ▶:** Press this button to change from Manual mode to Automatic (Remote) mode.
- **Alarm Cancel:** When an alarm is activated, either visually or audibly, press this button to silence or cancel the alarm.
- **Fault Reset:** Press this button to clear the fault from the LCD window after the fault has been corrected.

3. The Liquid Crystal Display (LCD)

- This window will toggle between the Generator screen and the Engine screen upon startup of the unit. By viewing these screens, the operator will be able to monitor both the engine and generator status while the unit is running.

4. The Diagnostics Keypad

- **▲**: Press this button to scroll up within the LCD window.
- **▼**: Press this button to scroll down within the LCD window.
- **Page Select**: Pressing this button will select the next screen.
- **Enter**: Pressing this button will place you inside the particular screen to review the generator's pre-programmed setpoints or parameters.

5. The Status Light Emitting Diodes (LED's)

- These six LED's will illuminate to display the current operational status of the generator:
 - **Alarm/Fault**: Indicates active or inactive alarms, but not reset shutdown alarms.
 - **Warning**: Indicates an active or inactive alarm, or a warning alarm that has not been reset.
 - **Ready/Manual**: Indicates the controller is ready to start and in the Manual mode.
 - **Ready/Auto**: Indicates the unit is in the Auto mode ready for the remote start signal.
 - **Running**: Indicates the unit is running.
 - **Supplying Load**: Indicates a load is being applied to the generator.

GENERATOR MONITORING

Generator information is shown in a toggling manner with the engine information after the first 60 seconds of operation, then every five seconds thereafter. The Generator screen will show frequency, line to neutral voltage, line to line voltage and amperage.

Note: When loading the generator, it is important to observe the amperage to determine the load balance on each line of the generator. Minor load unbalances, usually 10% or less, will not cause any particular problems. Every effort should be made to distribute the load equally between all lines.

- **Hertz**: Displays output frequency.
- **Generator Output Voltage**: Line to neutral display, single phase (1Ø).
- **Generator Output Voltage**: Line to line display, 3 phase (3Ø).
- **Amps**: Displays the AC output amperage produced by the generator.

GENERATOR SCREEN

Gen Freq	0.0	Hz		
NomVolt (3PY)	277	V		
NomAmps	40	A		
L1N	0V	L12	0V	
L2N	0V	L23	0V	
L3N	0V	L31	0V	
G	0	0	0	A

00494


ENGINE MONITORING

Engine information is shown in a toggling manner with the generator information after the first 60 seconds of operation and then every five seconds thereafter. The Engine screen will show oil pressure, engine coolant temperature, fuel level and battery voltage.

- **Oil Pressure**: Displays engine oil pressure. The display registers oil pressure between 0-100 psi (0-689 kPa). Normal operating pressure is between 35-80 psi (241-552 kPa).
- **Engine Temp**: Displays the temperature of the engine's coolant. If the coolant temperature exceeds the maximum water temperature of 230°F (110°C) the engine will automatically shut down. Zero will be displayed until a minimum temperature of 100°F (38°C) is reached.
- **Fuel Level**: Displays the level of fuel in the tank by percentage (50% = 1/2 tank, 75% = 3/4 tank, etc.). If the fuel level drops below a programmed low fuel point – usually at 15%, a low fuel warning and optional audio



alarm will be activated. If the fuel level drops below the programmed low fuel limit, usually at five percent, the engine will automatically shut down.

- **Battery Volts:** Displays the engine battery voltage. A normal reading is 13-14V on 12 volt systems and 24-26V on 24 volt systems (with the engine running).

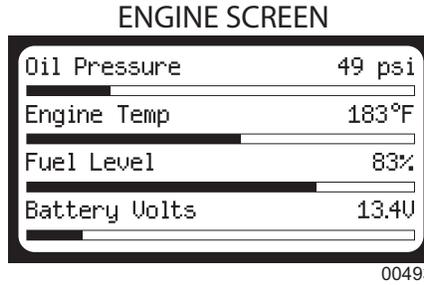

Additional information may be viewed while the unit is in Manual or Auto mode. By pressing the Page Select button, the operator will select one of the following screens; Running screen, Password screen, or History screen. In each of these page selections the operator may press the ▲ or ▼ buttons to display additional information as follows:


- **Running Screen:** The operator may press the ▲ or ▼ buttons to display the Alarm List screen, ECU Alarm List screen, Run Hours screen, ECU Values screen, Engine screen and Generator screen.

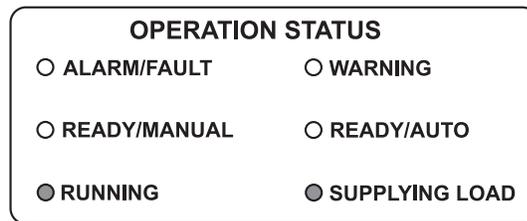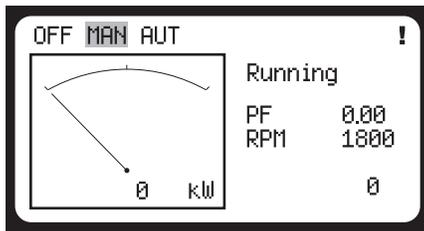

RUN HOURS SCREEN




ECU VALUES SCREEN

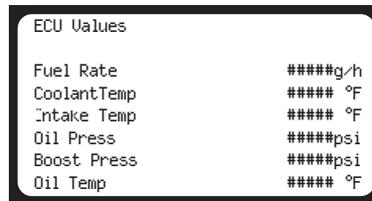

BINARY INPUTS SCREEN





BINARY OUTPUTS SCREEN

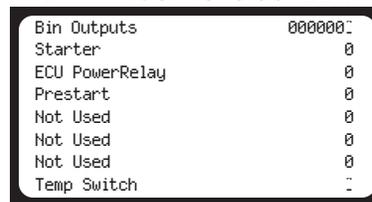

00492

- **Password Screen:** The operator may press the ▲ or ▼ buttons to move the cursor (>) up or down a list of text.

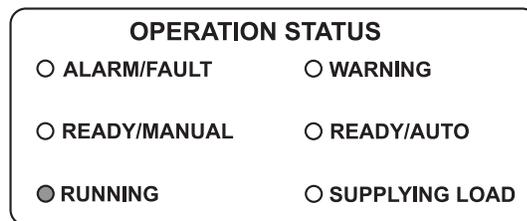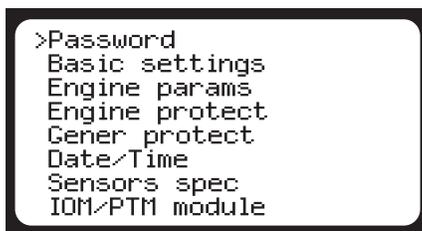

00128

- **History Screen:** The operator may press the ▲ or ▼ buttons to move the cursor (>) up or down a list of recent alarm or shutdown codes. Pressing the Enter button at a particular selection will allow the operator to scroll to the right in the LCD window to view the generator operating parameters at the time of the alarm or shutdown. The history of alarms or codes is saved in the digital controller. The most recent alarm or code is the first to be listed, with the time/date of the alarm or code at the bottom of the screen. The controller

stores up to 117 codes. When full, the controller will automatically remove the oldest file. These codes will not be lost when the Control Power switch is powered off.

```

No. Reason
> 0 Gen set start
-1 Switched On
-2 Gen set stop
-3 Gen set start
-4 Switched On
-5 Gen set stop
-----
03:45:54PM Aug-21-12
  
```

OPERATION STATUS	
<input type="radio"/> ALARM/FAULT	<input type="radio"/> WARNING
<input type="radio"/> READY/MANUAL	<input type="radio"/> READY/AUTO
<input checked="" type="radio"/> RUNNING	<input type="radio"/> SUPPLYING LOAD

00495

DIGITAL CONTROLLER INFORMATION DISPLAYS, FUNCTIONS, AND RESET

The Digital Controller constantly monitors vital generator and engine functions for a number of operation, alarm, and fault conditions. When a fault condition occurs, the engine will shut down automatically and the screen will show the fault that has caused the shutdown. To resume operation, the fault condition must be resolved. To reset the controller and resume operation, press the FAULT RESET.

The operation of the Digital Controller is divided into the following sections:

DIGITAL CONTROLLER - GENERATOR OPERATIONAL STATUS

The Digital Controller displays the operational status of the generator using the following codes:

No.	Engine State	Description
1	AfterCool	Engine aftercooling, cooling pump output is closed.
2	Cooling	The unit is cooling before stop.
3	Cranking	Engine is cranking.
4	EmergMan	Emergency manual gen-set operation.
5	Init	Autotest during controller power on.
6	Loaded	The unit is running at nominal speed and GCB OPEN/CLOSE is closed.
7	Not Ready	The unit is not ready to start.
8	Pause	Pause between start attempts.
9	Prestart	Prestart sequence in process, prestart output is closed.
10	Ready	The unit is ready to run.
11	Running	The unit is running at nominal speed.
12	Shutdown	Shutdown alarm is activated.
13	Starting	Starting speed is reached and the <i>idle timer</i> is running.
14	Stop	Stop.

No.	Electrical State	Description
1	StabilTO	Stabilization Timeout

DIGITAL CONTROLLER - ALARM MANAGEMENT

The Digital Controller is capable of displaying the following alarms:

No.	Type	Description
1	Sensor fail (FLS)	Sensor fail is detected when measured value is 6% out of the selected characteristic. Sensor fail is indicated by ##### symbol instead of measured value.
2	Warning (WRN)	When warning comes up, refer to list of possible alarms.
3	Shutdown (SD)	When the shutdown alarm comes up, the digital controller opens outputs GCB CLOSE/OPEN, FUEL, SOLENOID, STARTER and PRESTART to stop the engine immediately.

DIGITAL CONTROLLER - LIST OF ALARMS

Shutdown and warning fault conditions and the displayed message are described in the following table:

No.	Events Specification	Protection Type	Information on Binary Output Available	Description
1	AnInIOM Sd	SD	YES	Shutdown alarm configurable on the input of IG-IOM/IGS-PTM.
2	AnInIOM Wrn	WRN	YES	Warning alarm configurable on the input of IG-IOM/IGS-PTM.
3	Battery Flat (low battery)	SD	YES	If the controller switches off during starting sequence due to bad battery condition, it doesn't try to start again and activates this protection.
4	Binary Input	CONFIG.	YES	Configurable Warning/Shutdown alarms on the inputs of IL-NT.
5	ChrgAlternFail	WRN	YES	Failure of the alternator to charge the battery.
6	EmergencyStop	SD	NO	If the red <i>emergency stop</i> switch is pushed or opened, shutdown is immediately activated.
7	Engine Temp Sd	SD	NO	Water temperature is greater than <i>Sd Water Temp</i> setpoint.
8	Engine Temp Wrn	WRN	YES	Water temperature is greater than <i>Wrn Water Temp</i> setpoint.
9	Fgen<, >	SD	YES	The generator frequency is out of limits given by <i>Gen >f</i> and <i>Gen <f</i> setpoints.
10	Fuel Level Sd	SD	YES	Fuel level is smaller than <i>Sd Fuel Level</i> setpoint (5%).
11	Fuel Level Wrn	WRN	YES	Fuel level is smaller than <i>Wrn Fuel Level</i> setpoint (15%).
12	GCB fail	SD	NO	Failure of the generator circuit breaker.
13	Igen unbl	SD	NO	The generator current is unbalanced.
14	Low BackupBatt	WRN	NO	RTC backup battery is flat (low).
15	Oil Press Sd	SD	NO	Oil pressure is smaller than <i>Sd Oil Press</i> setpoint.
16	Oil Press Wrn	WRN	YES	Oil pressure is smaller than <i>Wrn Oil Press</i> setpoint.
17	Overload	SD	YES	The load is greater than the value given by <i>Overload</i> setpoint.
18	Overspeed	SD	YES	The protection comes active if the speed is greater than <i>Overspeed</i> setpoint.

No.	Events Specification	Protection Type	Information on Binary Output Available	Description
19	ParamFail	NONE	NO	Wrong checksum of parameters. Happens typically after downloading new firmware or changing of the parameter. The controller stays in INIT mode. Check all parameters, write at least one new parameter.
20	PickupFault	SD	NO	Failure of the magnetic pick up sensor for speed measurement.
21	Sd IOM fail	SD	NO	Shutdown alarm in case of lost connection to IOM/IGS-PTM module.
22	SprinklActive	WRN	NO	The protection is active if the output <i>Sprinkler</i> is closed.
23	Start failed	SD	YES	Unit did not start.
24	Stop fail	SD	YES	Unit did not stop.
25	Ubat	WRN	YES	Battery voltage is out of limits given by <i>Batt Undervolt</i> setpoints.
26	Underspeed	SD	YES	During starting of the engine, when the RPM reaches the value of <i>Starting RPM</i> setpoint, the starter is switched off and the speed of the engine can drop under <i>Start RPM</i> again. Then the <i>Underspeed</i> protection becomes active. Protection evaluation starts 5 seconds after startup.
27	Vgen<, >	SD	YES	The generator voltage is out of limits given by <i>Gen <V</i> and <i>Gen >V</i> setpoints.
28	Vgen unbal	SD	NO	The generator voltage is unbalanced more than the value of <i>Volt unbal</i> setpoint.
29	Wrn ECU Alarm	WRN	NO	ECU alarm list is not empty.
30	Wrn RA15 fail	WRN	NO	Warning alarm in case of lost connection to IGL=RA15 module.
31	WrnMaintenance	WRN	NO	The period for servicing is set by the <i>WrnMaintenance</i> setpoint. The protection comes active if the running hours of the engine reach this value.

DIGITAL CONTROLLER - HISTORY

The Digital Controller stores a record of each important event in the history file of the controller. The history file seats 117 records. When the history file is full, the oldest records are removed.

No.	Record Structure Abbreviation	Historical Value
1	AIM1	IG-IOM, IGS-PTM analog input 1 value (when configured IG-IOM, IGS-PTM)
2	Date	Date of historical event in format DD/MM/YY
3	OilP	IL-NT analog input 1 value (default: oil pressure)
4	FC	ECU alarm FailureCode
5	Vg2	Generator voltage L2
6	RPM	Engine speed
7	Ig2	Generator current L2
8	Ubat	Battery voltage
9	FMI	ECU alarm failure mode identifier
10	EngT	IL-NT analog input 2 value (default: water temperature)

ADJUSTING THE DISPLAY BACKLIGHTING

The brightness may be adjusted by the operator whenever the Digital Controller is powered up.

1. Press and hold ENTER, then press ▲ or ▼ to increase or decrease the brightness as needed.
2. Release the ENTER when the desired brightness is attained.

LOWERING THE TRAILER TONGUE


For units shipped with the trailer tongue in the upright position, follow these steps to lower the tongue.

1. Elevate the unit using a hoist or forklift, or use the front jack located on the trailer tongue.

Note: If using the front jack for support, it must first be moved to the trailer frame location.

2. Remove the hitch pin (1) securing the tongue to the trailer frame, then remove the hitch pin (2) from the trailer frame.
3. Lower the trailer tongue down and reinstall the hitch pins, removed in step 2, to the locations shown (3).

Note: If the jack was used to support the unit, the jack must be moved back to the tongue location before the unit can be towed. Connect the trailer tongue to a vehicle or other support and move the jack to the tongue location.

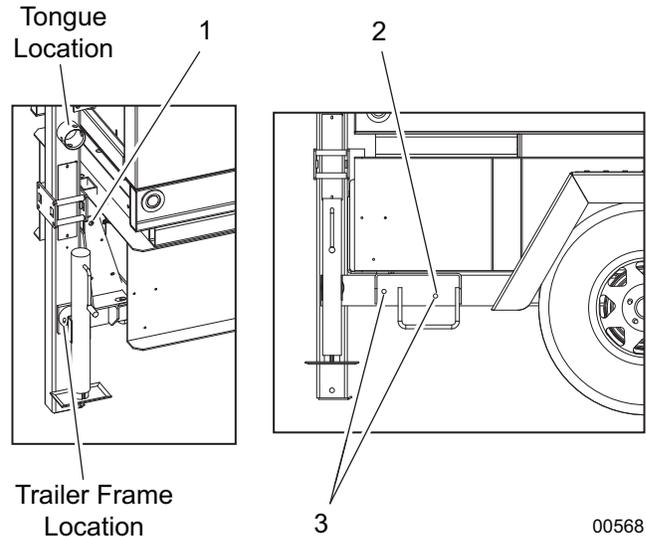

GENERATOR OUTPUT CONNECTION LUGS

The generator is equipped with connection lugs behind the lug box door located on the lower portion of the control box. The lugs provide connection points for attachment of external loads to the generator. A large decal on the inside of the connection lug door details the proper connections for selected voltages.

▲ WARNING

It is **HIGHLY RECOMMENDED** that only a trained and licensed electrician perform any wiring and related connections to the generator. Installation should be in compliance with the National Electrical Code (NEC), state and local regulations. Failure to follow proper installation requirements may result in equipment or property damage, personal injury or death.

▲ WARNING

Before any connections are made to the generator, make sure that the main circuit breaker and the Control Power switch are in the OFF (O) position and that the negative (-) battery cable is disconnected. Potentially lethal voltages may be present at the generator connection lugs.

▲ DANGER

IMPROPER OR INCORRECT CONNECTIONS TO A BUILDING'S ELECTRICAL SYSTEM CAN CAUSE POTENTIALLY LETHAL VOLTAGES TO BACKFEED INTO UTILITY LINES. THIS MAY RESULT IN INJURY OR ELECTROCUTION TO UTILITY WORKERS NEARBY. MAKE SURE THE GENERATOR IS SUPPLYING POWER TO AN ISOLATED OBJECT OR BUILDING THAT IS NOT CONNECTED TO ANY UTILITY LINES.


Use a hex-wrench to tighten the cable connections. The lug door is equipped with safety interlock switches that will

trip the main circuit breaker and disable the voltage regulator, dropping the operator output to residual voltage, if the door is opened while the unit is operating.

⚠ WARNING

Never attempt to disable or modify the connection lug door safety switches. Equipment damage, personal injury or death may result.

A ground connection is located next to the connection lugs. The unit **MUST HAVE** this ground lug connected to a good earthen ground for proper operating safety. The generator neutral is bonded to ground when it is shipped from the factory. The bonding plate will need to be removed when the generator is used as a standby power source. **INSTALLATION SHOULD BE IN COMPLIANCE WITH THE NATIONAL ELECTRICAL CODE (NEC), STATE AND LOCAL REGULATIONS.**

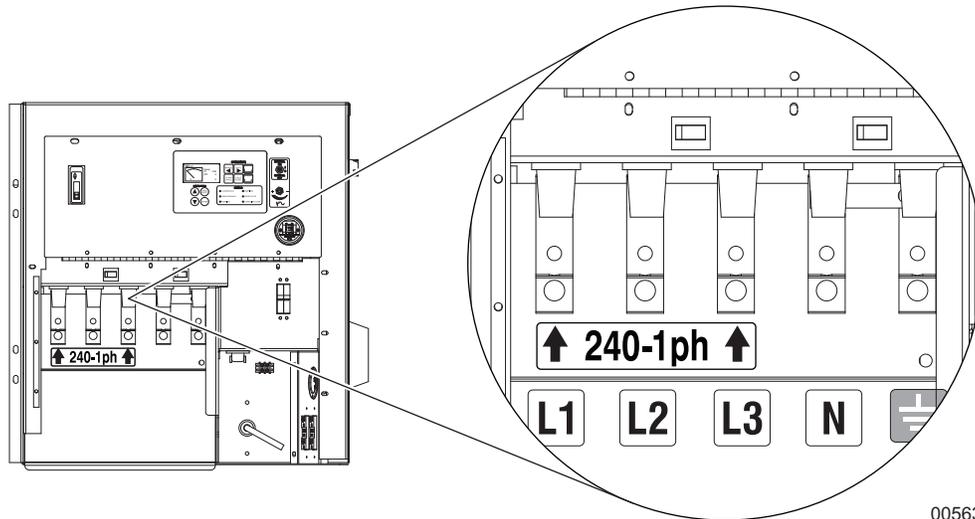

00563

GENERATOR CAM LOCK CONNECTIONS

The generator is equipped with cam lock connections, located behind the door on the right side of the receptacles. These receptacles provide connection points for attachment of external loads to the generator. A large decal on the inside of the connection lug door details the proper connections for selected voltages.

⚠ WARNING

It is HIGHLY RECOMMENDED that only a trained and licensed electrician perform any wiring and related connections to the generator. Installation should be in compliance with the National Electrical Code (NEC), state and local regulations. Failure to follow proper installation requirements may result in equipment or property damage, personal injury or death.

⚠ WARNING

Before any connections are made to the generator, make sure that the main circuit breaker and the Control Power switch are in the OFF (O) position and that the negative (-) battery cable is disconnected. Potentially lethal voltages may be present at the generator cam lock connection lugs.

⚠ DANGER

IMPROPER OR INCORRECT CONNECTIONS TO A BUILDING'S ELECTRICAL SYSTEM CAN CAUSE POTENTIALLY LETHAL VOLTAGE TO BACKFEED INTO UTILITY LINES. THIS MAY RESULT IN INJURY OR ELECTROCUTION TO UTILITY WORKERS NEARBY. MAKE SURE THE GENERATOR IS SUPPLYING POWER TO AN ISOLATED OBJECT OR BUILDING THAT IS NOT CONNECTED TO ANY UTILITY LINES.


Connections should be made by plugging power cables equipped with series 16 taper nose 400A, 600V cam lock

plugs into the cam lock receptacles. Secure the connection by rotating the plug a half turn to the right. The cam lock connection door is equipped with safety interlock switches that will trip the main circuit breaker and disable the voltage regulator, dropping the generator output to residual voltage, if the door is opened while the unit is operating.

⚠ WARNING

NEVER attempt to disable or modify the lug door safety switches. Equipment damage, personal injury or death may result.

A ground connection is located on the far right of the cam lock panel. The unit **MUST** be connected to a good earthen ground for proper operating safety. The generator neutral is bonded to ground when it is shipped from the factory. The bonding plate will need to be removed when the generator is used as a standby power source. **INSTALLATION SHOULD BE IN COMPLIANCE WITH NATIONAL ELECTRICAL CODE (NEC), STATE AND LOCAL REGULATIONS.**

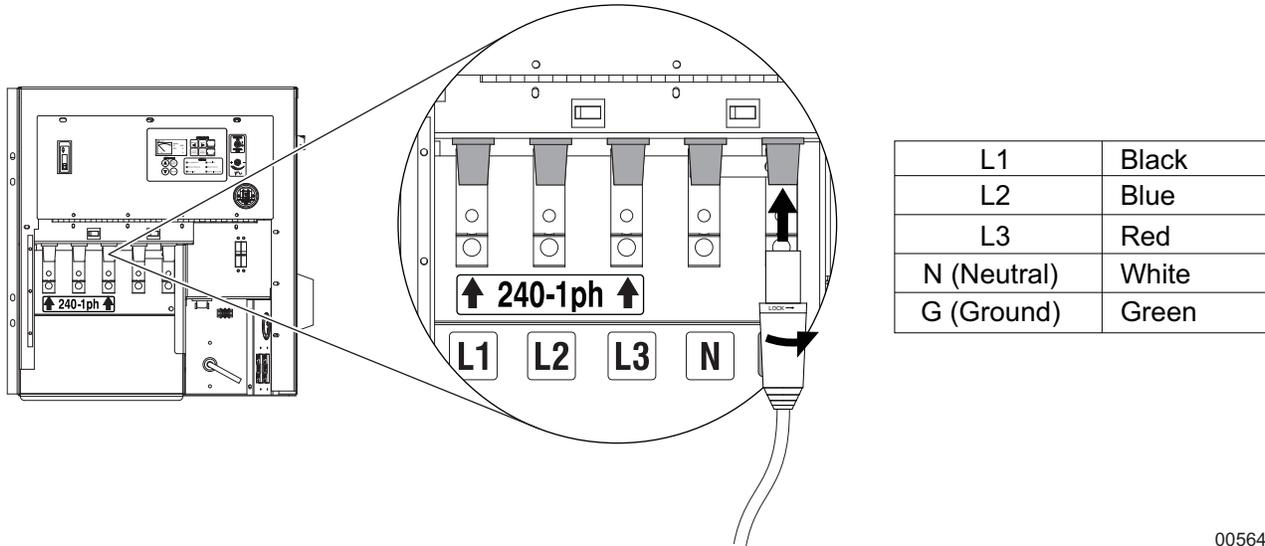

00564

VOLTAGE SELECTOR SWITCH

The voltage selector switch mechanically changes the connections between the generator output leads and the connection lugs on the main control panel. Voltage ranges are selected by rotating the handle on the switch to the desired voltage.


NOTICE

NEVER change the voltage selector switch while the engine is running or the controller is on. If the engine is running or starts while the setting is changed, severe arcing will occur causing damage to the switch and generator windings.


The voltage selector switch is equipped with a lockout mechanism. Once the proper voltage has been selected, insert a padlock through the lockout hole(s). By locking the handle in place, unauthorized changing of the voltage

setting is prevented.

277/480V 3-PHASE

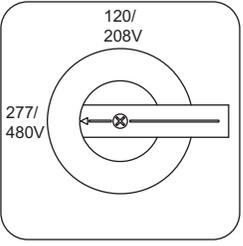

Switch styles vary by model.

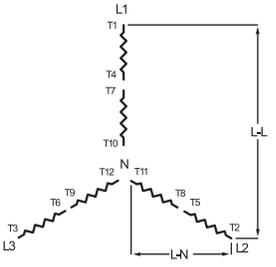

L1-L2 = 480V L1-N = 277V N = \perp


L2-L3 = 480V L2-N = 277V

L3-L1 = 480V L3-N = 277V


VOLTAGES AT RECEPTACLES		
RECEPTACLE	L-L	L-N
GFCI Duplex	-	139V
GFCI Duplex w/Buck	-	120V
Twist-locks	240V	139V

00083

120/208V 3-PHASE

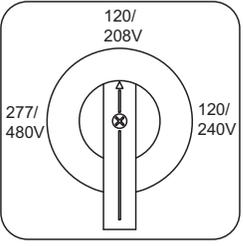

Switch styles vary by model.

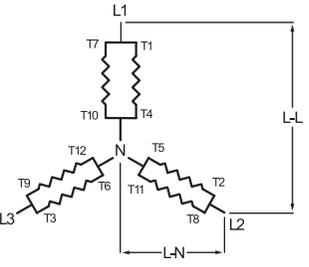

L1-L2 = 208V L1-N = 120V N = \perp


L2-L3 = 208V L2-N = 120V

L3-L1 = 208V L3-N = 120V


VOLTAGES AT RECEPTACLES		
RECEPTACLE	L-L	L-N
GFCI Duplex	-	120V
GFCI Duplex w/Buck	-	120V
Twist-locks	208V	120V

00085

120/240V 3-PHASE

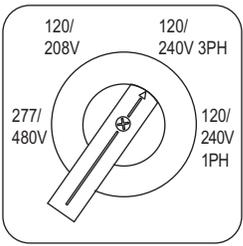

Switch styles vary by model.

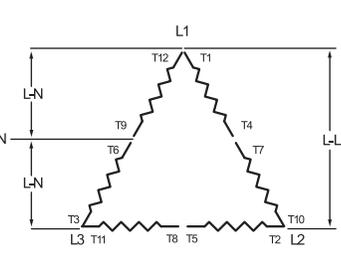

L1-L2 = 240V L1-N = 120V N = \perp

L2-L3 = 240V L2-N = 208V


L3-L1 = 240V L3-N = 120V

VOLTAGES AT RECEPTACLES		
RECEPTACLE	L-L	L-N
GFCI Duplex	-	120V
GFCI Duplex w/Buck	-	120V
Twist-locks	120V	0/120V


4 Position Voltage Selector Switch Option

00086

120/240V 1-PHASE

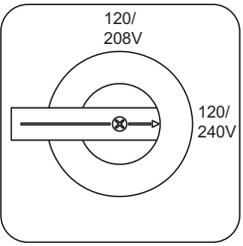

Switch styles vary by model.

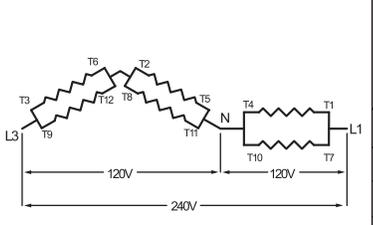

L1-L2 = - L1-N = 120V N = \perp

L2-L3 = - L2-N = -

L3-L1 = 240V L3-N = 120V

VOLTAGES AT RECEPTACLES		
RECEPTACLE	L-L	L-N
GFCI Duplex	-	120V
GFCI Duplex w/Buck	-	120V
Twist-locks	240V	120V

00087

= Not recommended for normal use.

PRESTART CHECKLIST

Before starting the generator, carefully read the prestart checklist. Make sure that all of the items are checked before trying to start the generator. This check list applies to both manual and remote starting of the generator.

- Read and understand **ALL** safety sections at the beginning of this manual.
- Make sure the Control Power switch is in the OFF (O) position.
- Make sure the circuit breakers (main and convenience) are switched to the OFF (O) position.
- Check that the generator is properly grounded to a good earthen ground per the National Electrical Code (NEC), state and local regulations.
- Check all electrical connections at the connection lugs. Are they wired correctly?
- Are the connection lugs tight?
- Check the voltage selector switch and make sure that it is set to the desired voltage.
- Is the voltage selector switch locked?
- Is the generator sitting level?
- Thoroughly check for any water inside, on, or near the generator. Dry the unit before starting.
- Check oil, coolant, and fuel levels and engine battery connections.
- Check engine fan belt tension and condition.
- Check engine fan belt guard.
- Check engine exhaust system for loose or rusted components.
- Check radiator and surrounding shroud for debris.
- Are any of the generator covers loose or missing?
- Are all preventive maintenance procedures up to date?
- Check that the battery disconnect switch is on.

ENGINE BREAK-IN REQUIREMENTS

Note: The EPA final tier 4 Isuzu engines have an engine break-in duration that will prohibit the unit from providing rated standby power upon factory delivery. The unit is tested at the factory and is initially capable of a prime standby power output. The engine performance will increase to 95% of full rated power during the first 20 hours of loaded operation. The unit will provide full rated power after the complete engine break-in period of 70 hours of loaded operation.


Operate the engine at heavy loads (60-90% [24-36kW] of rated output maximum) as much as possible during the break-in period. If the engine has spent significant time at idle, constant speed(s) and/or light load or if makeup oil is required, a longer break in period may be needed. Consult the engine operator's manual for a full description of necessary procedures on the addition of oil and extension of the break-in period. Use the schedule table on [page 35](#) as a guide for regular maintenance intervals.

EMERGENCY STOP SWITCH

The unit is equipped with one emergency stop switch. For location of the emergency stop switch, refer to "[Component Locations](#)" on [page 13](#). The red switch is clearly labeled "EMERGENCY STOP." The switch can be accessed and activated with all doors closed and locked.

Activate the emergency stop switch by pushing the red button in until it locks down. This will trip the main circuit breaker which will open the contact, disconnecting the load to the connection lugs. This will also open the fuel circuit, shutting down the engine. The emergency stop fault will be displayed on the control panel.

The switch will remain closed until it is pulled out.

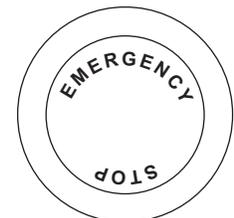

00230

NOTICE

Use the emergency stop switch only when the unit must be shut down immediately. For any other shut down, refer to "[Shutting Down the Unit](#)" on [page 33](#).


MANUAL STARTING OF THE UNIT

1. Move the Control Power switch to the ON (I) position.

⚠ DANGER

CARBON MONOXIDE: USING A GENERATOR INDOORS CAN KILL YOU IN MINUTES.



2. The Liquid Crystal Display (LCD) window will quickly display system information, all Light Emitting Diodes (LED's) will flash.

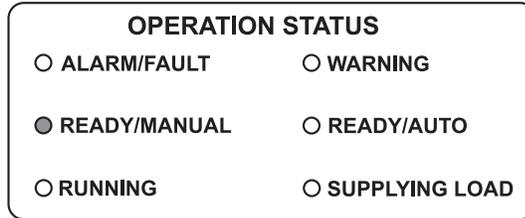

00497



3. The Ready screen will be displayed and the LCD window will indicate Manual mode. The Ready/Manual LED will be lit.

Note: The unit must be in the Manual mode with the Ready/Manual LED lit to start the unit.

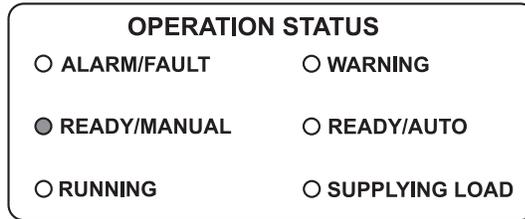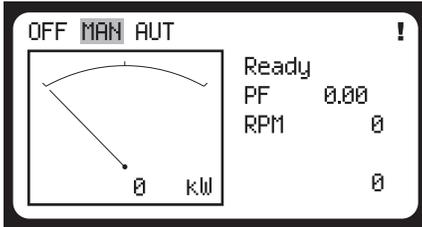



00498

4. Press ENGINE START. The Prestart screen will be displayed (if equipped) and a countdown will begin from 20 seconds to 0.

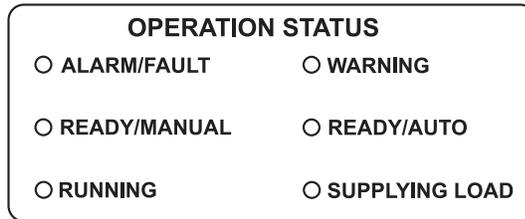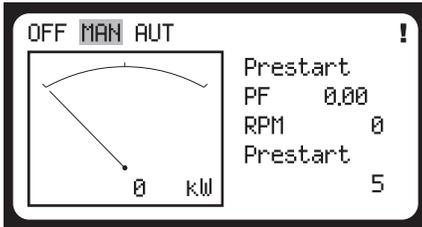

00499



5. The Starting screen will be displayed. The engine will crank and start running.

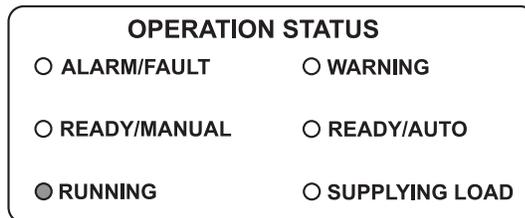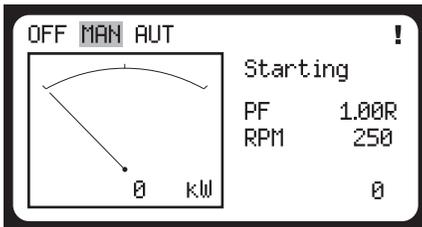



00500

6. The Running screen will display.

Note: It may take a few seconds for the engine to run smoothly and reach its governed operating speed. The 45 second V Detect time delay will start to count down.

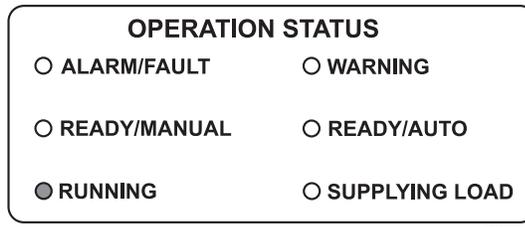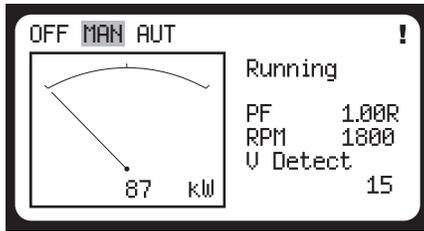

7. The LCD window will then toggle from the Running screen to the Generator screen and then to the Engine screen.

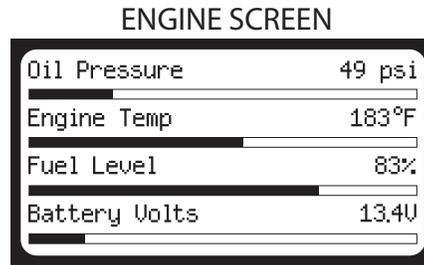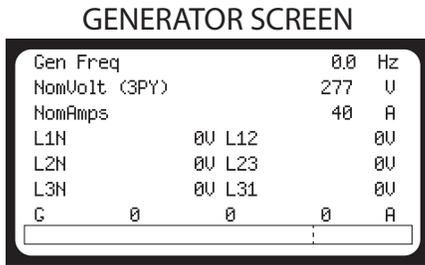

8. If the engine does not start after the first cranking attempt, the engine will pause for 15 seconds to allow the starter to cool. The LCD window will show "PAUSE". The engine will make two more attempts to start for a total of three crank cycles.
9. Should the engine not start and run within three starting cycles, the LCD window will show "SD START FAIL". The starting sequence may be repeated after the starter has had a minimum of two minutes to cool. Press FAULT RESET to clear the controller. To start the unit, press ENGINE START.

Note: The engine controller may skip the preheat engine steps on some of the larger models.

10. Once the engine starts, it will immediately begin speeding up to a constant 1800 rpm. The engine may hunt or change speeds until operating speed is reached. After a few minutes of operation, the engine will be warmed up and the LCD window will show engine and generator operating parameters. Temperature will be shown as "0" until the engine temperature is approximately 100°F (38°C).
11. Check the generator for excessive noise or vibration and any coolant, oil, or fuel leaks before applying any loads.
12. Check that the AC output voltage is correct. The output voltage can be fine adjusted by using the fine voltage adjustment screw (rheostat). Refer to ["Fine Voltage Adjustment" on page 32](#).
13. Check that the frequency (Hz) is correct. With no loads connected to the generator, the frequency should read approximately 60 Hz, depending on the type of engine governing used.
14. If all wiring connections have been made correctly, switch the main circuit breaker to the ON (I) position and then add any loads attached to the convenience receptacles by switching the respective circuit breaker to the ON (I) position. You will notice a slight change in engine sound when a load is applied to the unit.

AUTO (REMOTE) STARTING OF THE UNIT

The Auto button is used when the generator is started from a location other than the control panel and by using a transfer switch. Auto (remote) start is the normal setting when the generator is being used as a standby power supply. Before putting the generator in the Auto mode, review *“Prestart Checklist” on page 26* and *“Manual Starting of the Unit” on page 27*. Also follow all safety warnings and information on isolating the generator with a transfer switch if the unit is to be used as a standby power supply. Refer to *“Transfer Switch” on page 31*. Then continue with the steps described below:

1. Perform a manual start of the generator at least once to verify that the engine is operating correctly.
2. If a check of the remote start circuit is desired, remove the wires from the remote start terminal block. Press the Auto button, the Liquid Crystal Display (LCD) window should highlight “AUT” in the upper left corner. Attach a jumper wire (minimum 16 gauge) across the two terminals on the remote start terminal block. This applies a ground to the Digital Controller to close the starting circuit contacts. The engine should crank, start and run.
3. Remove the jumper wire from the remote start terminal block and the engine will stop. Reconnect any necessary wires from the remote start switch (transfer switch) to the remote start terminal block.
4. Confirm unit is in Auto mode. The LCD window should have “AUT” highlighted in the upper left corner.
5. Close the main circuit breaker (set to the ON (I) position).
6. Secure the generator by closing and locking all access doors.
7. The generator is now ready for remote starting.

VOLTAGE REGULATION

The electronic voltage regulator controls the output of the generator by regulating the current into the exciter field. The regulator has three screwdriver adjustable potentiometers that may be adjusted for voltage, stability and voltage roll-off (U/F). The voltage regulator on your unit is adjusted before shipment from the factory. Contact Generac for additional information before attempting to adjust the voltage regulator.

DERATING FOR ALTITUDE AND TEMPERATURE

All units are subject to derating for altitude and temperature; this will reduce the available power for operating tools and accessories connected to the receptacles. Typical reductions in performance are 2-4% for every 1000 ft (305 m) of elevation and 1% per 10°F (5.6°C) increase in ambient air temperature over 77°F (25°C).

WET STACKING


The unit is powered by a diesel engine. Diesel engines are susceptible to wet stacking if lightly loaded. Wet stacking occurs when an engine is run at less than 30% of its full load capacity, causing unburned fuel to accumulate in the exhaust system. Wet stacking can be detected by continuous black exhaust when the unit is under a constant load. It can also cause fouling of injectors and buildup on engine valves. Diesel engines operate properly when applied loads are between 30% and 100% capacity. Appropriate generator sizing is determined by the anticipated load. If the unit is in a wet stack condition, load the unit heavily for five hours or until the exhaust is clear.

CONTROL PANEL RECEPTACLES

The generator is equipped with two receptacles. The duplex receptacles are 120VAC rated at 20A each with ground fault circuit interrupt (GFCI) protection. These receptacles are not routed through the main circuit breaker. Each receptacle has its own circuit breaker, located above the receptacles. Each breaker is sized to the maximum rating of the corresponding receptacle.

NOTICE

Power to the receptacles is available any time the generator is running, **EVEN IF THE MAIN CIRCUIT BREAKER IS IN THE OFF (O) POSITION. MAKE SURE THAT ANY EQUIPMENT CONNECTED TO THE RECEPTACLES IS TURNED OFF BEFORE TURNING THE BREAKERS ON.** Make sure that the voltage selector switch is in the proper position and that the output voltage is correct for the equipment that is connected to the receptacles. Improper voltage may cause equipment damage or malfunction.

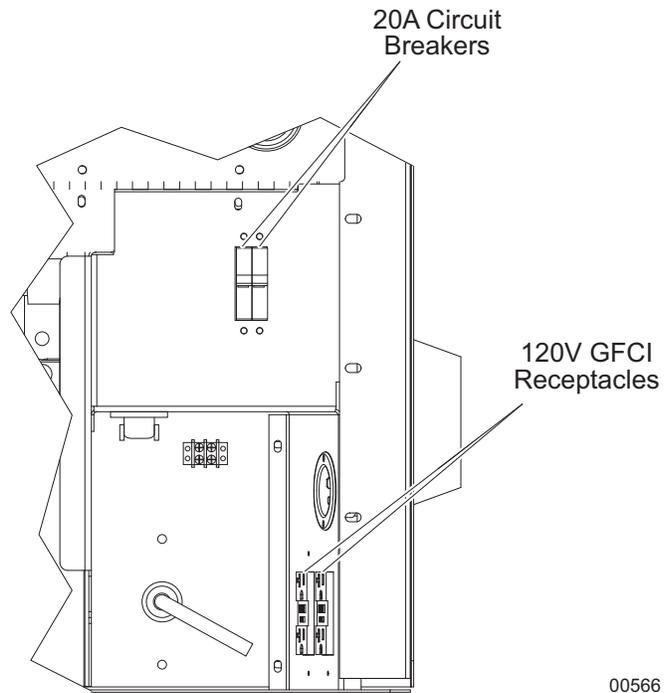

00566


Note: When the voltage selector switch is in position for 480/277V 3Ø, voltage at the two GFCI receptacles is 139 volts. Magnum Power Products LLC does not recommend using the receptacles in the 480V position. When the voltage selector switch is in position for 208/120V 3Ø, voltage at the two GFCI receptacles is 208/120 volts.

MAIN CIRCUIT BREAKER

The main circuit breaker is located on the main control panel. When the breaker is in the OFF (O) position, power is interrupted between the customer connection lugs (and optional cam lock receptacles) and the generator. Once the connections have been made to the connection lugs and/or cam lock receptacles, and the generator has been started and allowed to reach normal operating temperature, the breaker may be switched to the ON (I) position.

The main circuit breaker will be tripped, disconnecting power to the connection lugs and cam lock receptacles, if any of the following items occur while the unit is running:

- Overload of the generator circuits to the connection lugs or cam lock receptacles (208/120V only).
- The door covering the connection lugs/cam lock receptacles is opened.
- If the emergency stop switch is activated.

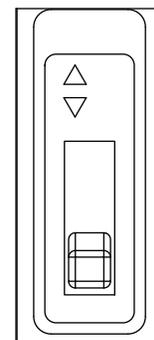

00489

Make sure that any problems that cause the main circuit breaker to trip are corrected before returning the switch to the ON (I) position.


⚠ WARNING

The main circuit breaker interrupts power to the connection lugs and cam lock receptacles only. The receptacles have power even if the main circuit breaker is in the OFF (O) position. To disconnect power to the receptacles, use the individual circuit breakers located near each receptacle.

REMOTE START TERMINAL BLOCK

The remote start terminal block provides a connection for installation of a remote start switch which will allow the unit to be started by a remote dry-contact closure switch. For location of the remote start terminal block, refer to [“Main Control Panel Features” on page 14](#)

Before entering Auto mode, verify that the contacts on any remote switch linked to the unit are OPEN. If the contacts on a remote switch are closed, the engine will crank and start when Auto mode is entered. Attach the switch leads to the two unused terminals on the unit’s remote start terminal block. For additional information, refer to [“Auto \(Remote\) Starting of the Unit” on page 29](#).

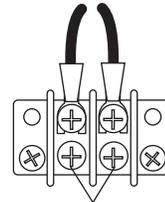

Remote Start Switch Terminals 00231

TRANSFER SWITCH


NOTICE

The generator neutral is bonded to ground when it is shipped from the factory. The bonding plate will need to be removed when the generator is used as a standby power source. Installation should be in compliance with the National Electrical Code (NEC), state and local regulations.

When the generator is used as a standby power supply, it must be equipped with a transfer switch which isolates it from the utility’s distribution system. A transfer switch is designed to transfer electrical loads from the normal power source (utility) to the emergency power source (generator) when normal voltage falls below a prescribed level. The transfer switch automatically returns the load back to the normal source when power is restored back to operating levels.

⚠ DANGER

FAILURE TO ISOLATE THE GENERATOR FROM THE NORMAL POWER UTILITY CAN CAUSE POTENTIALLY LETHAL VOLTAGE TO BACKFEED INTO THE UTILITY LINES. THIS MAY RESULT IN INJURY OR ELECTROCUTION OF UTILITY WORKERS NEARBY. MAKE SURE THE GENERATOR IS ISOLATED BY A TRANSFER SWITCH FROM ANY LOCAL UTILITY LINES. THIS ALSO APPLIES IF THE GENERATOR IS BEING USED AS A BACK-UP TO SOME OTHER TYPE OF POWER SUPPLY.

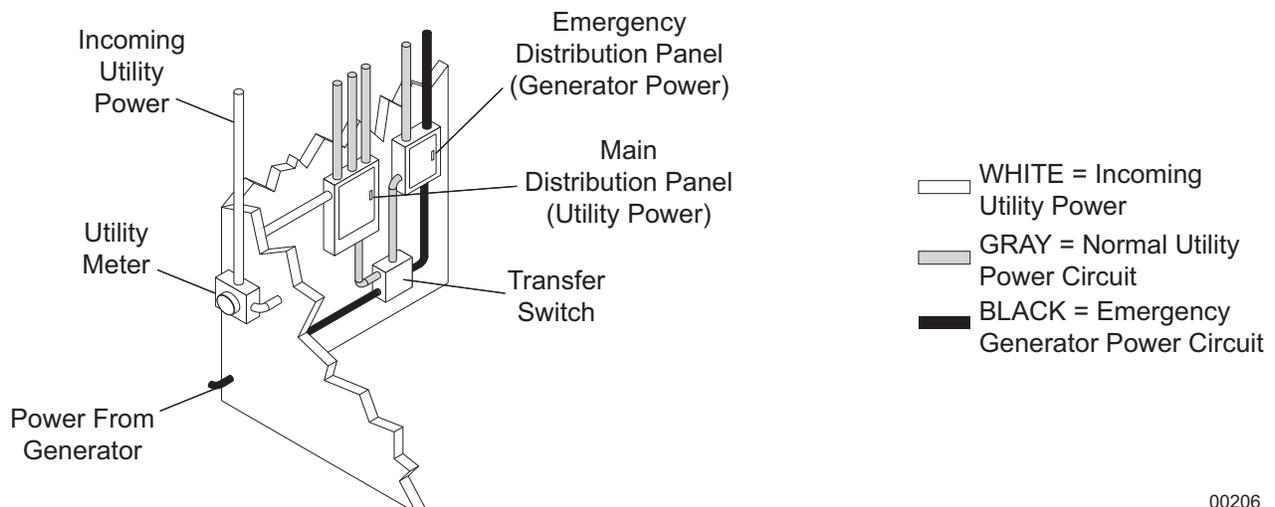

00206

Installation of a transfer switch or other type of remote starting device is the responsibility of the generator user.

Installation of such devices must be performed by following all directions supplied by the manufacturer of the switch. If attaching generator to a power supply normally serviced by a utility company, notify the utility company and check local and state regulations. Familiarize yourself with all instructions and warning labels supplied with the switch.

⚠ WARNING

ONLY a licensed electrician should perform any wiring and any related connections to the generator. Installation should be in compliance of the National Electrical Code (NEC), state and local regulations. Failure to follow these procedures could result in property damage, personal injury or death. Before any connections are attempted, make sure the main circuit breaker and the Control Power switch are in the OFF (O) position and that the negative (-) battery cable has been disconnected from the engine starting battery.

NOTICE

When using the generator as a standby or substitute power supply, make sure the output voltage and phase rotation of the generator match those of the local power utility. Improper voltage or phase rotation may cause equipment damage or malfunction.

AUTO EXERCISE TIMER

Generators installed in a standby application should be exercised regularly to maintain operating condition and to ensure responsiveness in an emergency situation. The following procedure demonstrates how to run (exercise) the generator on a time schedule:


1. Press PAGE SELECT until "Password" appears at the top of the screen.
2. Press ▼ until "Date/Time" is selected and press ENTER.
3. Press ▼ until "Timer1 Repeat" is selected and press ENTER.
4. Choose the day or days the unit should run and press ENTER.
5. Press ▼ until "Timer1 ON Time" is selected and press ENTER.
6. Adjust the desired time to start running and press ENTER.
7. Press the down arrow until "Timer1Duration" is selected and press ENTER.
8. Adjust the time period to the length of time the unit should run after starting and press ENTER.
9. Press PAGE SELECT three times to return to the Main menu.
10. Press AUTO to switch modes to automatic.

Note: The controller must be in Auto mode to run at the programmed time. Use a trickle battery charger or solargizer to prevent the controller from draining the battery while in Auto mode.

FINE VOLTAGE ADJUSTMENT

Upon startup of the generator, the Running screen will display "V Detect" and will countdown from 45 seconds to zero. This is a safety feature of the controller to protect the generator from over or under voltage upon startup.

V Detect is a 45 second time delay and count down process before the digital controller records the generator nominal output voltage. this nominal generator voltage is then compared to the current set point voltage of the voltage selector switch. If the nominal voltage recorded by the controller is greater than or lower than the current set point voltage of the voltage selector switch setting by 10% or more, the controller will shut the generator down automatically. The display will read: "Wrn Gen L1 <V," "Wrn Gen L2 <V," "Wrn Gen L3 <V" or "Sd Gen L1 <V," "Sd Gen L2 <V," "Sd Gen L3 <V." This means the controller warned (WRN) or shut down (SD) the unit due to an output voltage irregularity.

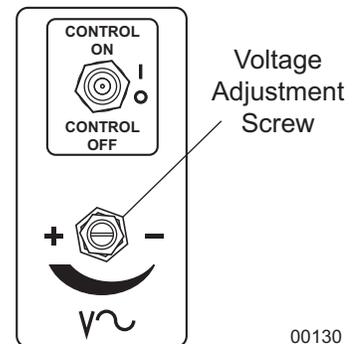

The output voltage of the generator may be adjusted after the generator is running by using the fine voltage adjustment screw. The adjustment screw is located directly below the Control Power switch on the control panel. This screw turns a rheostat that will provide an increase (+) or a decrease (-) in the generator output voltage as displayed on the Generator screen on the digital control panel. If the voltage is increased or decreased too fast or too slow, the unit will automatically shut down. This adjustment needs to be made within the 45 second delay and countdown to

zero period.

To adjust the output voltage, check the output voltage on the Generator screen. Look at the “L1N” voltage or the “L12” voltage on the display. The generator nominal output voltage should be within 10% of the voltage rating on the voltage selector switch.

To adjust the output voltage, use a flat head screwdriver to turn the screw in the desired direction until the required voltage shown on the LCD window matches the stated voltage on the voltage selector switch.

For Example: With the voltage selector switch set to “208/120V” 3 phase position, the voltage shown on the Generator screen must be within $\pm 10\%$ of the 208/120V position (188-228V line to line/108-132V line to neutral).

Note: Each time the voltage selector switch is changed from one setting to another, an adjustment will need to be made to the fine voltage using this adjustment screw.

SHUTTING DOWN THE UNIT


Check with personnel using power supplied by the generator and let them know that the power is going to be turned off. Make sure the power shut down will not create any hazards by accidentally turning off equipment that needs to be kept on (pumps, compressors, lights, etc.).

1. Remove all loads from the generator by opening all circuit breakers (turn to the OFF (O) position).
2. Let the engine run for approximately five minutes to allow it to cool down.
3. Push ENGINE STOP. Pressing the red Engine Stop will result in the generator going into the shutdown cycle and starting a 15 second shutdown timer called stop value. If the unit does not shut down within 15 seconds, a stop fail alarm will be displayed on the Liquid Crystal Display (LCD) window.
4. Move the Control Power switch to the OFF (O) position.

Note: For extended storage time, disconnect the battery. Refer to the engine operator’s manual for extended storage requirements.

TOWING THE TRAILER

1. Use the jack to raise or lower the trailer onto the hitch of the towing vehicle. Lock the hitch coupling and attach the safety chains or cables to the vehicle. Release the jack locking pin and rotate the jack into the travel position. Make sure the locking pin snaps into place.
2. Connect any trailer wiring to the tow vehicle. Check for proper operation of the directional and brake lights.
3. Make sure all doors are closed and secure.
4. Check for proper inflation of the trailer tires. Maximum tire pressures can be found beginning on [page 9](#).
5. Check the wheel lugs. Tighten or replace any that are loose or missing. If a tire has been removed for axle service or replaced, tighten the lugs in the order shown, to the following specifications:
 - A. Start all lug nuts by hand.
 - B. First pass tighten to 20-25 ft-lbs (27-33 Nm).
 - C. Second pass tighten to 50-60 ft-lbs (67-81 Nm).
 - D. Third pass tighten to 90-120 ft-lbs (122-162 Nm).

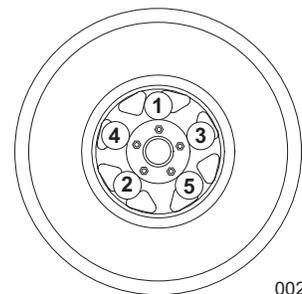


00204

Note: After the first road use, re-torque the lug nuts in sequence.

6. Maximum recommended speed for highway towing is 45 mph (72 km/h). Recommended off-road towing speed is not to exceed 10 mph (16 km/h) or less, depending on terrain.

LIFTING THE GENERATOR

A large central lift point is located on the top of the generator. The central lift point is connected to a lift structure inside the unit. Attach a sling or hook directly to the central lift point only if the devices are in good condition and the equipment being used to raise the unit has sufficient capacity. For approximate weights, refer to Specifications beginning on [page 9](#). Always remain aware of others around you when moving or lifting the generator. Keep the cabinet doors closed and locked.

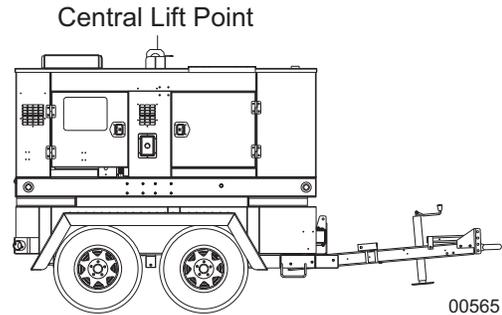

DAILY WALK AROUND INSPECTION

Look for conditions that could hinder performance or safety, such as (but not limited to) oil/coolant/fuel leakage, blocked vents, loose/missing hardware and electrical connections.

Visually inspect the fan belt for cracks, fraying, stretching and that the belt is properly seated in pulley grooves. Replace the belt according to the manufacturer's recommendations.

▲ CAUTION

Failure to perform a daily inspection may result in serious damage to the prime mover.

Note: At the 500 hour/12 month service interval, it is recommended that the belt be removed and checked for wear. While the belt is removed, inspect pulleys and bearings. Rotate and feel for hard turning or unusual sounds. If pulleys or bearings need replacement, contact engine manufacturer.

ENGINE AND GENERATOR MAINTENANCE

Check the engine oil level daily before starting the engine. **DO NOT** start the generator if the oil level is below the add mark on the dipstick. The normal operating level for the engine oil is anywhere in the crosshatch pattern between the full and add markings. Add oil to the engine only if the level is below the add mark on the bottom of the crosshatch pattern. **DO NOT OVERFILL** the crankcase. Refer to the engine operator's manual for the proper grade of oil, including special operating conditions such as a change in season or climate.

Check the coolant level daily. The coolant is checked by visually inspecting the level in the coolant overflow jug, located near the radiator. The normal operating level is anywhere between the full and add markings on the overflow jug, with the optimum level noted as normal range. **WHEN THE ENGINE IS STOPPED AND COMPLETELY COOL**, coolant may be added directly to the overflow jug. Refer to the engine operator's manual for coolant recommendations and proper mixture.

Check the condition of the air filter by viewing the level of vacuum draw on the filter minder gauge. Replace the air filter when the yellow center bar reaches the red section on the gauge (20 in. H₂O).

Poorly maintained equipment can become a safety hazard! In order for the equipment to operate safely and properly over a long period of time, periodic maintenance and occasional repairs are necessary. **NEVER** perform even routine service (oil/filter changes, cleaning, etc.) unless all electrical components are shut off. When servicing this equipment always follow the instructions listed below.

- Make sure the engine start switch is turned to the OFF (O) position.
- Verify that all circuit breakers are open (the OFF (O) position).
- Activate (push in) the emergency stop button.
- Disconnect the negative (-) terminal on the battery.
- Attach a "Do Not Start" sign to the control panel. This will notify everyone that the unit is being serviced and will reduce the chance of someone inadvertently trying to start the unit.
- If the unit is connected to a remote start or transfer switch, make sure the remote switch is also off and tagged.
- Never wash the unit with a high pressure hose or with any kind of power washer.

- Never wash the engine block or fuel tank with a power washer or steam cleaner. Water may enter the cabinet and collect in the generator windings or other electrical parts, causing damage.
- If the unit is stored outside, check for water inside the cabinet and generator before each use. If wet, dry the unit thoroughly before starting.

BASIC MAINTENANCE SCHEDULE - ISUZU ENGINE

NOTICE

Refer to the original equipment manufacturer’s operating manual for a complete list of maintenance requirements. Failure to comply with the procedures as described in the engine operator manual will nullify the warranty, decrease performance and cause equipment damage or premature equipment failure. Maintenance records may be required to complete a warranty request.

Use the schedule in the following table as a guide for regular maintenance intervals. For additional or replacement copies of the engine operator’s manual, contact an authorized dealer in your area.

Item	Daily	250 Hours	500 Hours
Check Oil Level*	◆		
Check Coolant Level	◆		
Check Fuel Level	◆		
Drain Fuel Filter	◆		
Check Tire Pressure	◆		
Check All Electrical Connections	◆		
Clean Battery	◆		
Check Fan Belt Tension (Replace If Necessary)	◆		
Inspect Radiator Fins For Debris, Clean As Required	◆		
Preheating Condition Check	◆		
Check Engine Starting Conditions and Noise Conditions	◆		
Check Exhaust Smoke Condition	◆		
Replace Engine Oil		◆	
Replace Fuel Filter Element		◆	
Clean Water Sedimenter Element		◆	
Electromagnetic Pump Filter Replacement or Cleaning		◆	
Check Fan Belt Tension (Replace If Necessary)			◆
Oil Filter Element Replacement			◆
Replace Air Filter Element			◆
Lubricate Leveling Jacks			◆
Check Generator Drive Plate Torque (refer to page 39)			◆

* Change the oil after the first 50 hours.

RESETTING THE “TIME TO SERVICE” REMINDER

The Digital Controller will display “WrnMaintenance” when the unit is due for maintenance or service. The maintenance or service interval is set at 250 hours of engine running time. Once the unit has been serviced, the Time to Service reminder needs to be reset to the 250 hour interval. The following procedure demonstrates how to reset the running hours to 250:

1. With the unit shut down, power up the controller with the Control Power switch. The Initialization screen will be displayed. The controller will toggle automatically to the Ready screen.
2. Press PAGE SELECT. The next screen will display lines of text; starting with Password, which will have a cursor (>) in front of it, then Basic Settings, Engine Params, Engine Protect, etc.
3. Press ▼ to move the cursor (>) down to “Engine Protect”.

4. Press ENTER. "WrnMaintenance" will appear at the top left of the screen. The current service time hour setting remaining (0) will be one line below it on the right side.
5. Press ENTER. The current run time in hours will now appear on the left side of the screen, directly under "WrnMaintenance."
6. Press ▲ and reset the current run time hour setting to 250. If you pass the 250 time interval, use ▼ to get back to the 250 time interval.
7. Press ENTER to save the current run time hour setting.
8. Move the Control Power switch to the OFF (O) position.

CHECKING GENERATOR DRIVE PLATE TORQUE

Follow the procedure below to check the torque of the generator drive plate bolts in accordance with the maintenance chart beginning on [page 35](#).

1. Disconnect the engine starting battery.
2. Remove the generator fan guard.
3. Torque each of the drive plate bolts to 36 ft-lbs (49 Nm).
4. Reinstall the generator fan guard. Reconnect the battery.

JACK MAINTENANCE


The following procedures should be performed at least annually.

SIDE-WIND MODELS

- The internal gearing and bushings of the jack must be kept lubricated. Apply a small amount of automotive grease to the internal gearing by removing the jack cover, or if equipped, use a needle nose applicator or standard grease gun on the lubrication point found on the side of the jack near the crank. Rotate the jack handle to distribute the grease evenly.
- A lightweight oil must be applied to the handle unit at both sides of the tube.
- If equipped, the axle bolt and nut assembly of the caster wheel must also be lubricated with the same lightweight oil.

TOP-WIND MODELS

- Apply a lightweight oil to the screw stem.

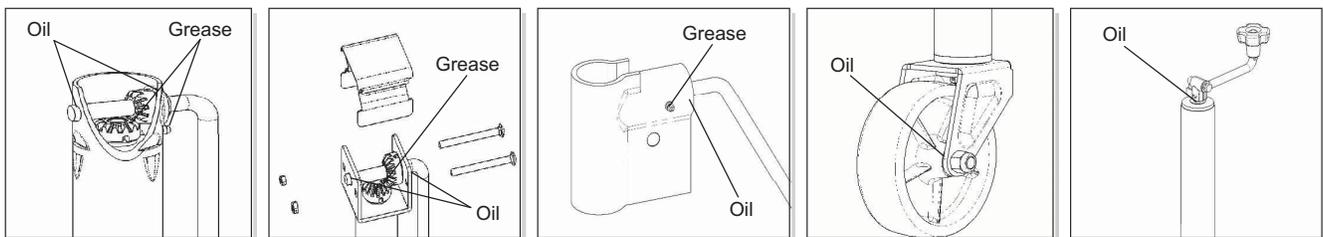

00243

TRAILER WHEEL BEARINGS

The trailer axles are equipped with a grease zerk fitting to allow lubrication of the wheel bearings without the need to disassemble the axle hub. To lubricate the axle bearings, remove the small rubber plug on the grease cap, attach a standard grease gun fitting to the grease zerk fitting and pump grease into the fitting until new grease is visible around the nozzle of the grease gun. Use only a high quality grease made specifically for lubrication of wheel bearings. Wipe any excess grease from the hub with a clean cloth and replace the rubber plug when finished. The minimum recommended lubrication is every 12 months or 12,000 miles (19,312 km). More frequent lubrication may be required under extremely dusty or damp operating conditions.

TROUBLESHOOTING AUTOMATIC SHUT DOWN CONDITIONS

▲ WARNING

Allow engine to cool before performing any troubleshooting procedures. Contacting the engine when it is hot will cause severe personal injury.

LOW FUEL LEVEL SHUT DOWN

1. Check the fuel level on the Liquid Crystal Display (LCD) window. Confirm that the generator is sitting level to ensure an accurate reading.
2. Check for leaks in the fuel tank. The fuel tank should not run dry under normal circumstances. The engine controller will shut the engine down when there is five percent of fuel remaining in the tank. This is done to keep the fuel lines from running dry.
3. If the fuel level is good and no leaks are found, check the fuel level sender and the connecting wiring for damage. To check for continuity between the sender and the engine controller, remove the appropriate bolts from the control panel to access the inside of the control box. Refer to the appropriate DC wiring diagram in the back of this manual for the proper path between the engine controller and the fuel level sender.

LOW OIL PRESSURE SHUT DOWN

1. Check the level of the engine oil with the dipstick. The engine controller will shut the engine down when the oil pressure is less than 20 psi (138 kPa). Add oil if required.
2. Visually inspect the engine for oil leaks.
3. If the oil level is good, restart the unit and verify the loss of oil pressure. Shut the engine down immediately if the oil pressure value does not read 5 psi (34 kPa) within five seconds.
4. Check the oil pressure sender. To identify corrective action, refer to the troubleshooting section of the engine operator's manual provided with the unit.

LOW COOLANT LEVEL SHUT DOWN

1. Allow the engine to cool.
2. Check the coolant level in the radiator. To access the radiator cap, you must remove the access panel from the top of the enclosure directly above the radiator. Add coolant until it is 3/4 in. (1.9 cm) below the filler neck. Secure the radiator cap back into its original position.
3. Inspect coolant hoses, engine block and water pump for visible leaks.
4. Check engine oil to verify no coolant has mixed with it (oil will appear milky if coolant is present). Refer to the engine operator's manual for additional information.

HIGH COOLANT TEMPERATURE SHUT DOWN

1. Check the coolant level in the overflow jug.
2. Restart the engine and read the coolant temperature to verify High Coolant Temperature Shut down. Stop the engine immediately if the coolant temperature is 230°F (110°C) or more.
3. Allow the engine to cool. Add coolant to the overflow jug if it is low and then check the level of coolant in the radiator. To access the radiator cap, you must remove the access panel from the top of the enclosure directly above the radiator. Add coolant until it is 3/4 in. (1.9 cm) below the filler neck. Secure the radiator cap back into its original position.
4. Check the radiator shroud and ducting for blockage and remove any foreign matter.
5. Inspect coolant hoses, engine block and water pump for visible leaks.
6. Check the tension of the serpentine drive belt for the water pump.
7. If no other problems are found, remove the load on the generator and restart the engine. Check the coolant temperature and shut the engine down immediately if it starts to overheat. Refer to the engine operator's manual for additional information on engine overheating.

OVERCRANK SHUT DOWN


1. Check the fuel level in the tank.
2. Check for proper operation of the fuel pump.

3. Check air filter for blockage.
4. If the engine will not start, refer to the engine operator's manual for additional information on troubleshooting starting problems.

OVERSPEED OR UNDERSPEED SHUT DOWN


1. Disconnect all loads and restart the generator. Read the frequency (Hz) on the LCD window. With no loads on the generator, the frequency should read 60.0 Hz.
2. If the frequency is above or below 60.0 Hz, the engine speed will have to be adjusted. Refer to the engine operator's manual for throttle adjustments on mechanically governed units and refer to the electronic governor manual for electronically controlled units.

AC WIRING DIAGRAM

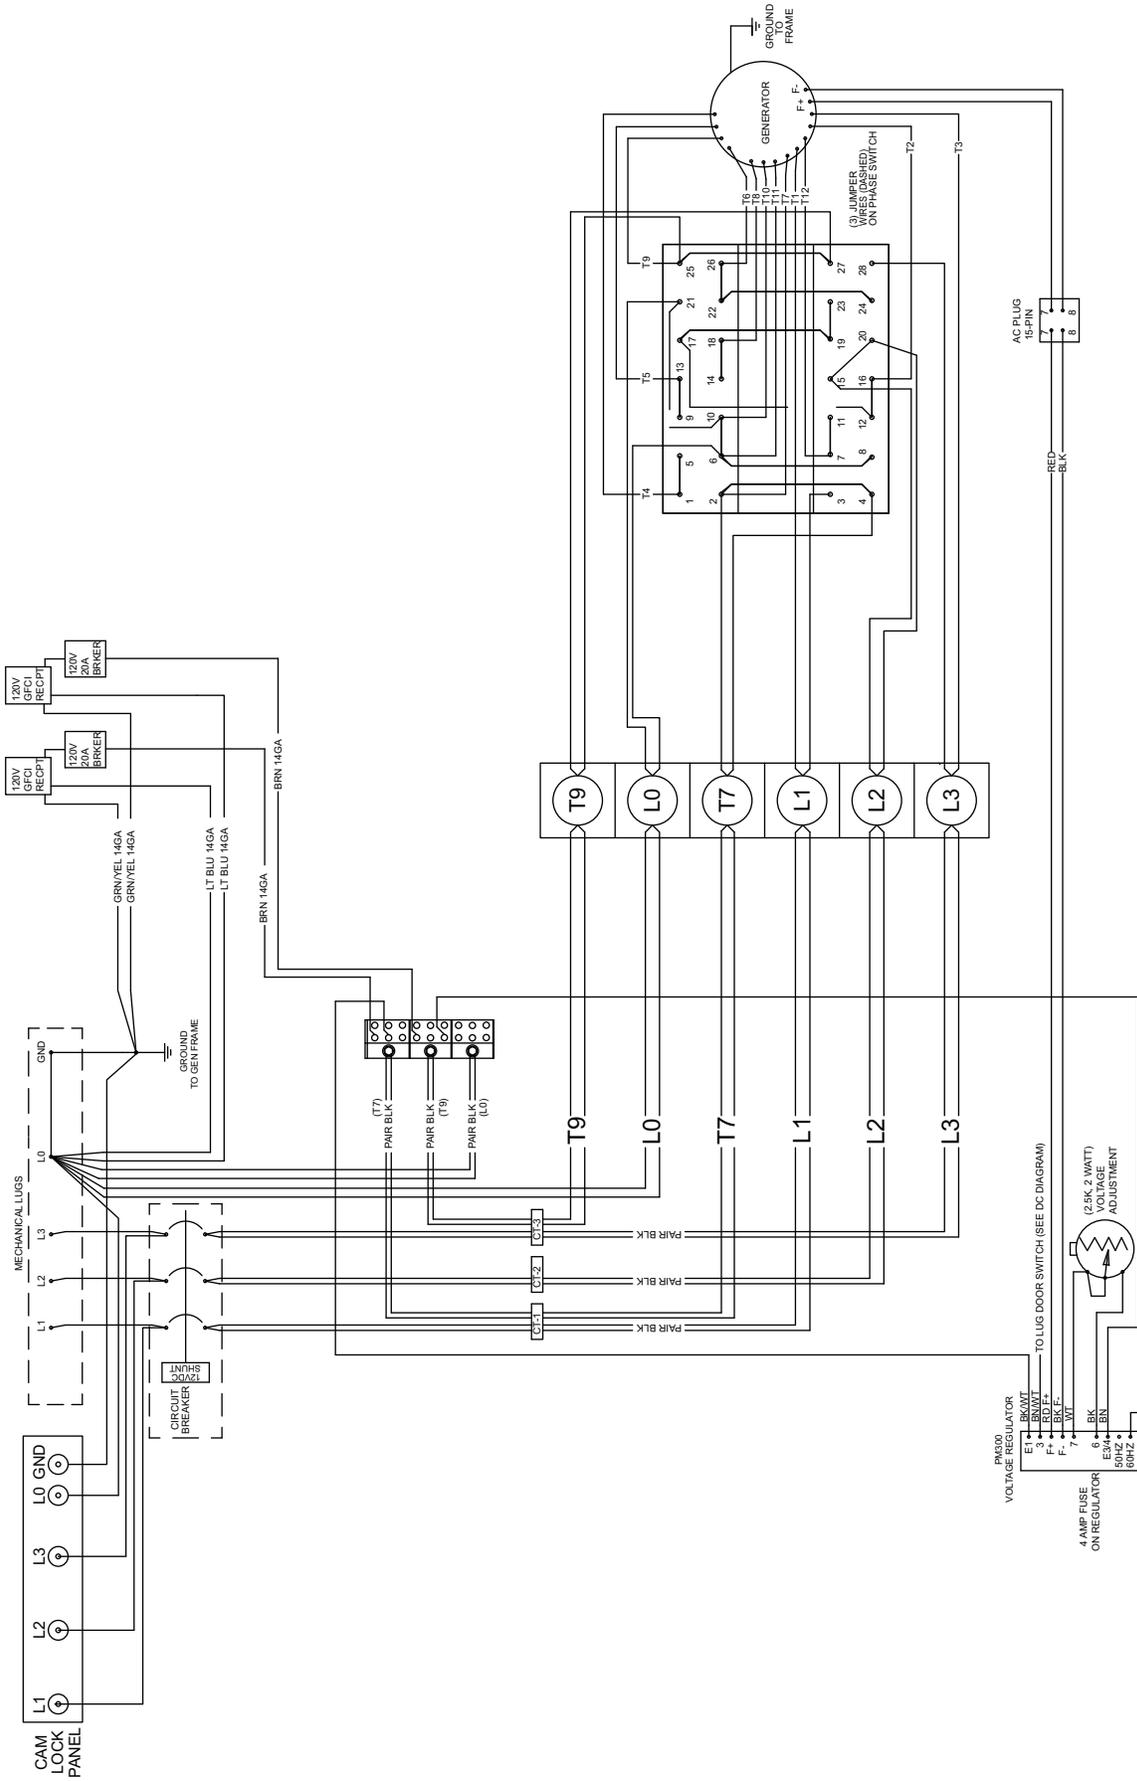


90475_ORG_09.05.13

TRAILER LIGHTS WIRING DIAGRAM

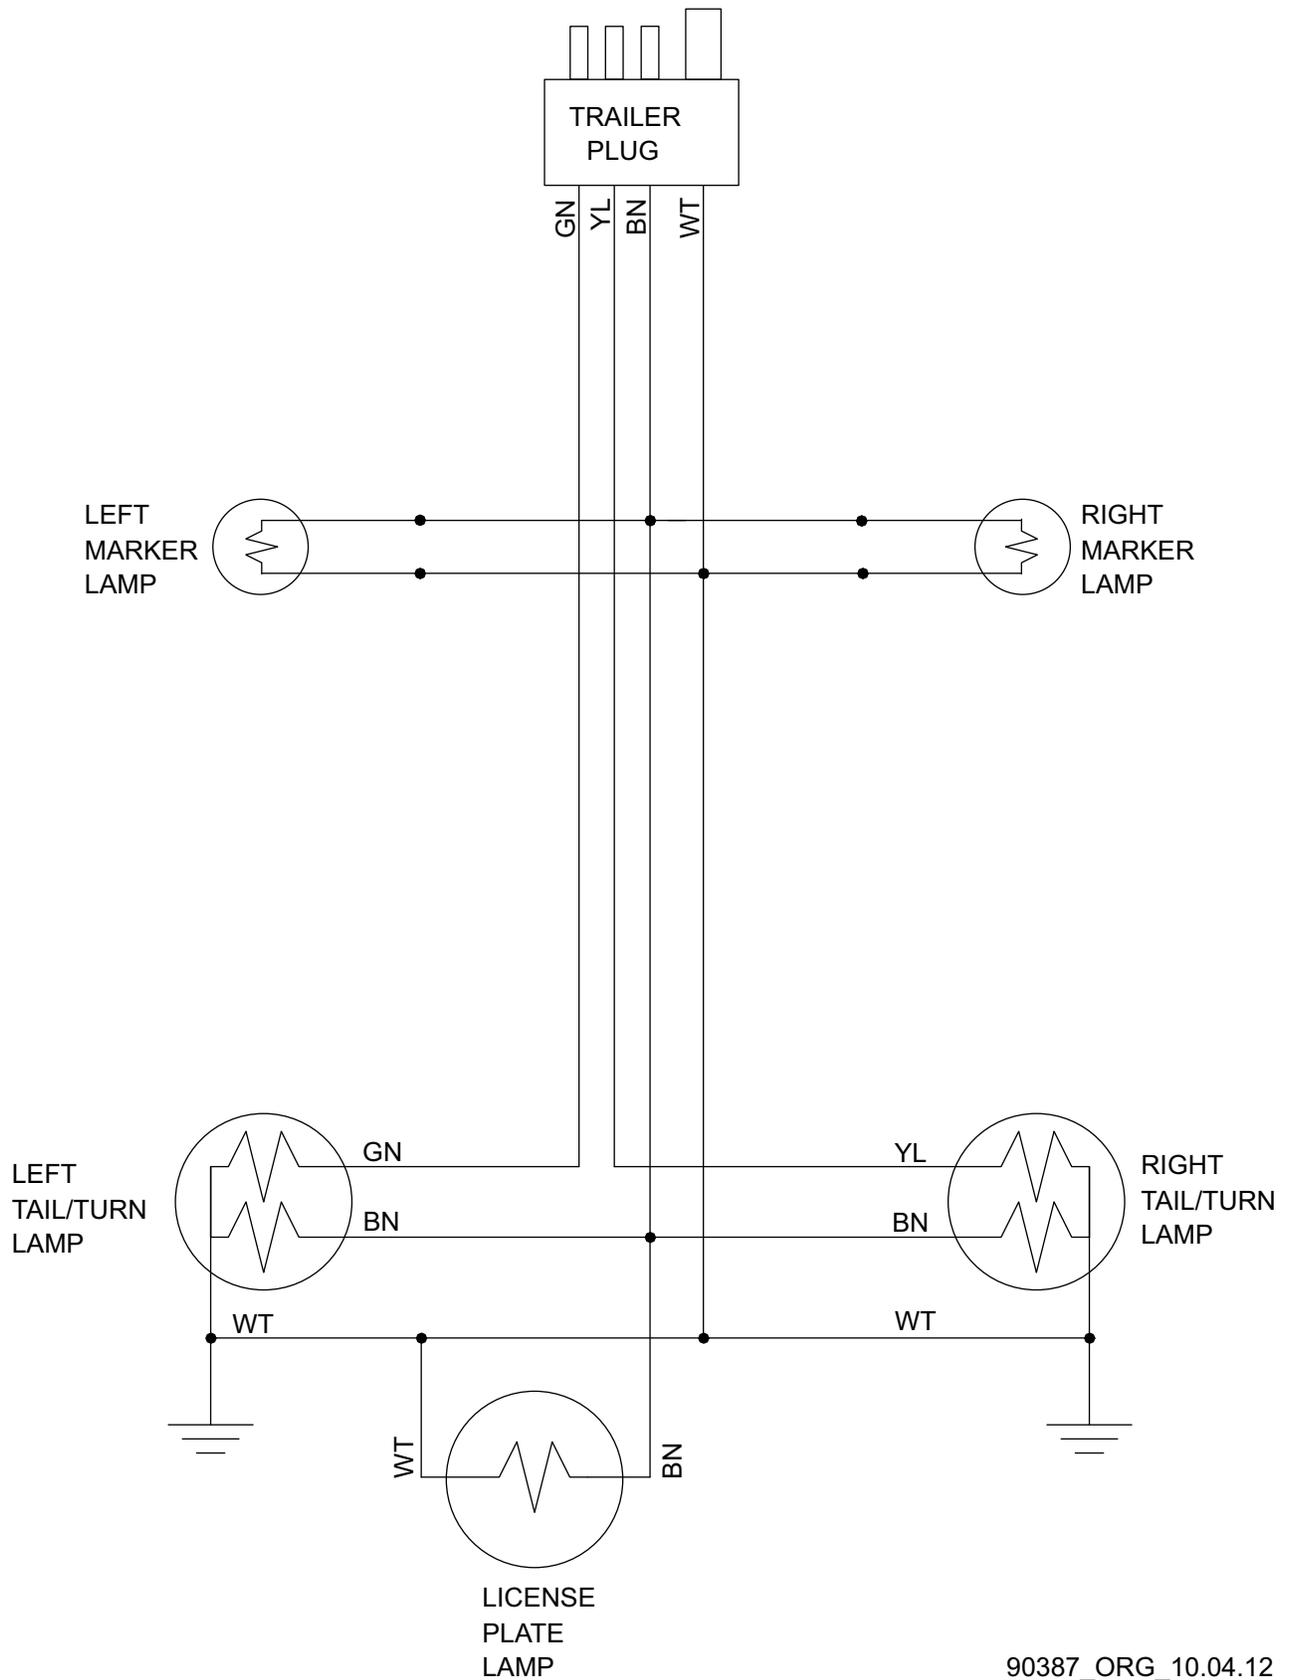

90387_ORG_10.04.12

WIRING HARNESS - ELECTRIC BRAKE

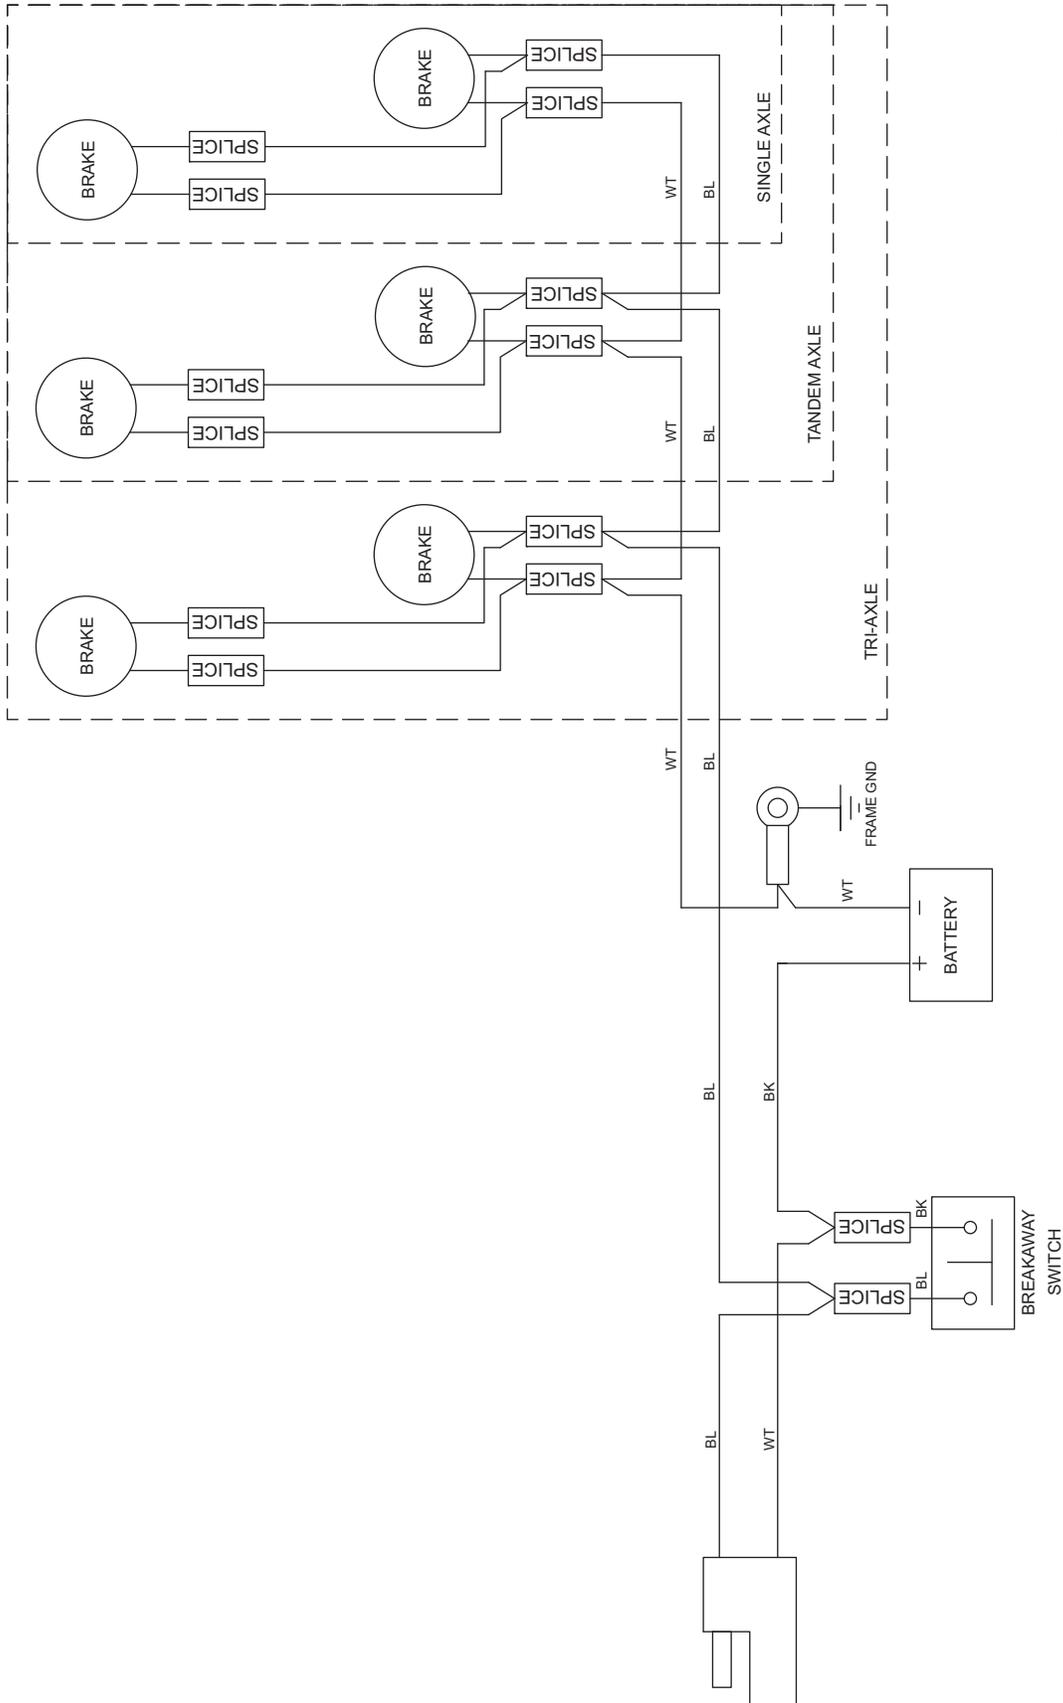

90286_E_03.18.14

REV: A
PART NO: 33688
04.23.14